


Siri Eyes Free

You can talk to Siri using the  (Talk) button on the steering wheel when your iPhone is paired to the *Bluetooth*® HandsFreeLink® (HFL) system.


▶ **Phone Setup** P. 338

■ Using Siri Eyes Free



(Hang-up/back) Button

Press to deactivate Siri.

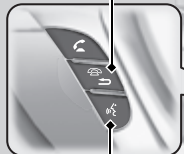


(Talk) Button

Press and hold until the display changes as shown.



 Appears when Siri is activated in Siri Eyes Free



While in Siri Eyes Free:
The display remains the same.
No feedback or commands appears.

▶▶ Siri Eyes Free

Check Apple Inc. website for features available for Siri.

We recommend against using Siri other than in Siri Eyes Free while operating a vehicle.

▶▶ Using Siri Eyes Free

Some commands work only on specific phone features or apps.