










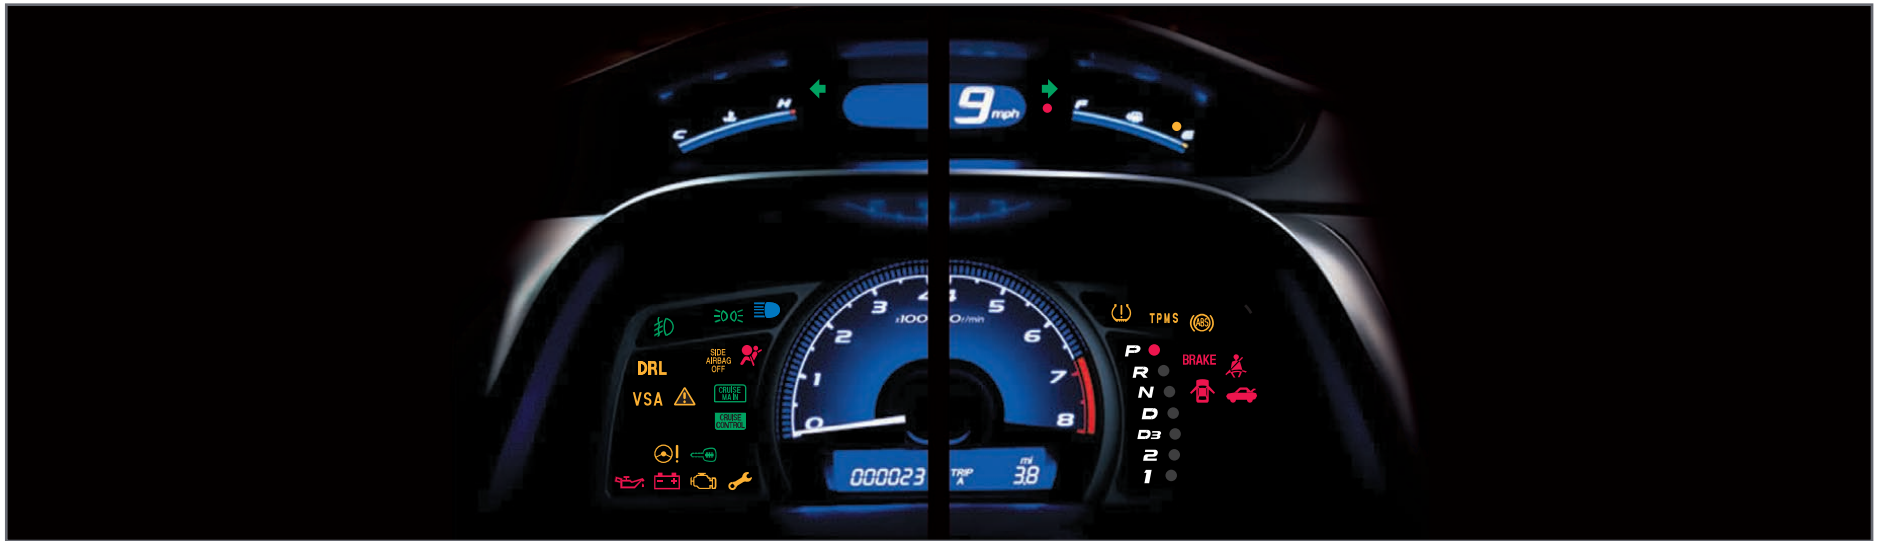

## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.




 
### Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer










 
 
 Charging system	 ABS (anti-lock brake system)
 Low brake fluid	 DRL (daytime running lights)
 Low oil pressure	 Malfunction indicator lamp (check engine light)
 SRS (supplemental restraint system)	 TPMS (tire pressure monitoring system)
 EPS (electric power steering)*	 VSA (vehicle stability assist)*

### Condition Indicators

Action is needed by driver

 Parking brake on: <b>Release</b>	 Low fuel: <b>Refill</b>
 Door/Trunk open: <b>Close door(s) / trunk</b>	 Low tire pressure: <b>Add air</b>
 Seat belt reminder: <b>Fasten seat belt(s)</b>	 Maintenance Minder™: <b>Make dealer appointment</b>

### On/Off Indicators

 PASSENGER AIRBAG <b>OFF</b> (above Hazard Warning button)	 1st detent: parking lights <b>on</b> 2nd detent: headlights <b>on</b>
 SIDE AIRBAG <b>OFF</b>	 Turn signals/hazards <b>on</b>
 VSA blinks: <b>active*</b> VSA solid: <b>OFF</b>	 Fog lights <b>on*</b>
 CRUISE CONTROL <b>on*</b>	 High beams <b>on</b>
 CRUISE MAIN <b>on*</b>	 Rev limit indicator**
 Immobilizer Flashes: improperly coded key; <b>use correct key</b>	

\* if equipped  
\*\* Si model only