

ADAPTIVE CRUISE CONTROL (ACC)

Operating ACC

Check the MID for information.



How to Use ACC

Turning ACC On

1. Press MAIN.
2. ACC appears in the MID.

Using ACC

1. Accelerate to the desired speed (above 25 mph).
2. Press SET/- and release the accelerator pedal. The set speed is fixed, and ACC begins.
3. To increase speed, press RES/+. To decrease speed, press SET/-.

Standard Cruise Control

1. Press and hold the Distance button.
2. A beep sounds, and the selected mode appears in the MID.

Canceling ACC

There are three ways to cancel:

- Press MAIN.
- Press CANCEL.
- Tap the brake pedal.

Set a time or space interval between your vehicle and the vehicle ahead of you. When the vehicle ahead changes speed, ACC senses the change and accelerates or decelerates your vehicle's speed to maintain a set range.

Changing Vehicle Distance

Control the distance between your vehicle and the vehicle in front of you.

ACC automatically adjusts the following distance based on the range selected and your vehicle speed.

Extra Long Range Long range Normal range Short range



Press the Distance button to shuffle through four ranges.



The selected range and set speed are shown on the MID.

Range	MID Screen
Extra Long	50 mph
Long	50 mph
Middle	50 mph
Short	50 mph

If a vehicle enters the ACC range, a beep sounds and a vehicle icon appears on the MID.



If there is no vehicle ahead of you, a dotted-line vehicle icon appears on the MID.



Note: The ACC radar sensor in the front grille can detect and monitor the distance of a vehicle up to approximately 100 yards ahead.