


SMS TEXT MESSAGING AND E-MAIL

Receive and send text messages or e-mails from your paired and linked compatible phone. Visit handsfreelink.honda.com to check if this feature is compatible with your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

Receiving Messages

Touch items on the screen to make selections.


1. A notification appears on the screen. Select Read to open the message.
2. The message is displayed, and the system reads it aloud.

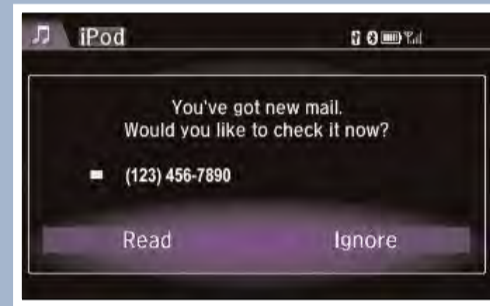

Replying to Messages

Touch items on the screen to make selections.


1. With the message open, select Reply.
2. Select one of the six available reply messages.
3. Select Send.

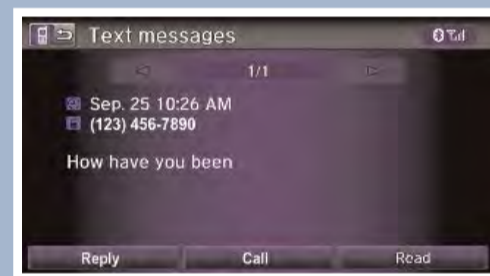

Calling the Sender

Touch items on the screen to make selections.

1. With the message open, select Call.
2. The system begins dialing the number.

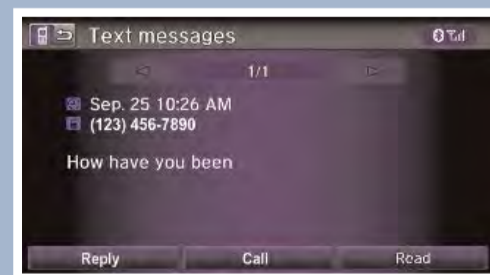

Note: Notifications and operation for SMS Text and E-mail are separate. Choose your desired account in Phone Settings.