

ECO ASSIST™


Provides real-time feedback on your driving style so you can learn how to maximize energy economy. It is always on and consists of the Ecological Drive Display (on the MID), Ambient Meter, ECON Mode button, and ECON indicator.

Activating the ECON Mode

1. Press the **ECON** mode button.



3. Check the MID.

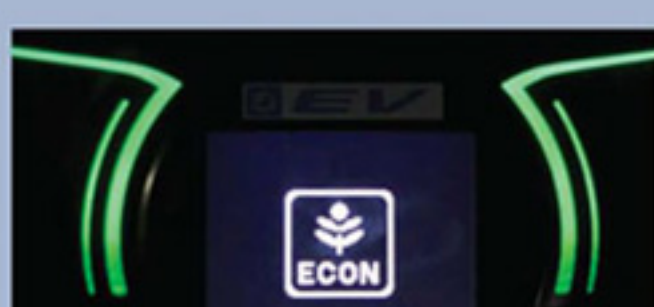

2. The **ECON** mode indicator comes on.




4. Press either **INFO** (▲/▼) button and **toggle** to the Ecological Drive Display.



Note: When ECON mode is activated, performance of the vehicle's cruise control and climate control system may be affected to achieve maximum energy economy.

Driver Feedback

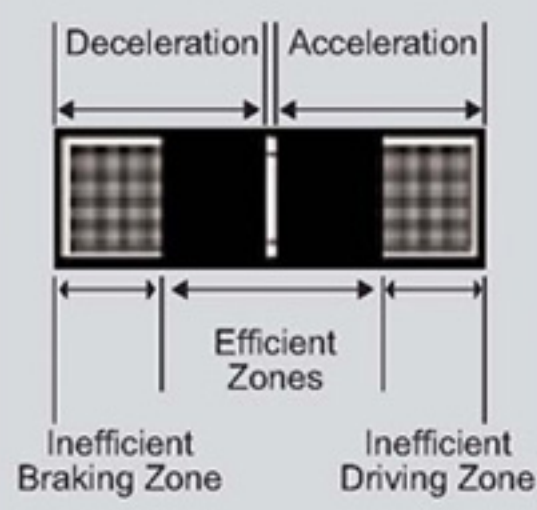

Real-time Energy Efficiency Coach

Driving Style	Eco Drive Bar (on the MID)	Ambient Meter Background Color Changes	Energy Efficiency
Smooth, steady acceleration maximizes energy efficiency			
Smooth, steady deceleration maximizes energy efficiency			
Moderate acceleration			
Moderate deceleration			
Rapid acceleration lowers energy efficiency			
Rapid deceleration lowers energy efficiency			

- Goals:**
- Keep the Eco Drive bar near the center.
 - Keep the Ambient Meter at **GREEN**.

NORMAL/ECON mode shown

ECO Assist Scoring

Monitors the energy efficiency of your driving style in real time and converts results into leaves, which are displayed in a series of five "plant" icons on the MID.

When you start your vehicle, make sure the MID shows the Ecological Drive Display to view your Eco Assist score in real time.



As you drive, you earn leaves if you drive in an efficient manner, or lose them if you drive inefficiently.



When you turn the vehicle off, your drive cycle and lifetime score are displayed on the MID.

