

# INFORMATION DISPLAY

Consists of several displays that provide you with useful information.

## Accessing the Information Display



When you start the engine, the display shows your last active selection from the previous drive cycle.



To toggle between the different displays, press and release SELECT repeatedly.


Press TRIP/RESET to switch between Trip A and B readings.

## Information Displays


Outside temperature, Odometer, Trip meter



Outside temperature, Instant and average MPG, Trip meter

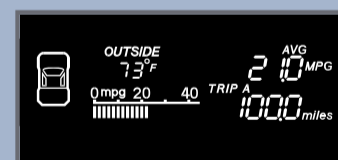

Oil life

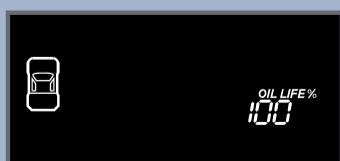

Outside temperature, Instant MPG, Fuel range, Trip meter

