

 
## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



### Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer




Charging system



Anti-Lock Brake System (ABS)



 Brake system, low brake fluid



Malfunction lamp  
(check engine light)



Low oil pressure



Tire Pressure Monitoring System  
(TPMS) (*blinks and stays on*)



Supplemental restraint system  
(SRS)



Vehicle Stability Assist® (VSA)



Electric power steering  
(EPS)



Smart Entry System



Power system



Brake system

### Condition Indicators

Action is needed by driver



Parking brake on:  
**Release**



Seat belt reminder:  
**Fasten seat belt(s)**



READY:  
**Ready to drive**



Immobilizer (*blinks*):  
**Use other vehicle key  
and see dealer**



Low fuel:  
**Refill**



Low tire pressure:  
**Add air**



System message indicator:  
**Check MID**

### On/Off Indicators



**PASSENGER AIRBAG OFF**  
(next to upper display)



Turn signals/hazards **on**



**VSA OFF**



High beams **on**



**ECON Mode on**



Electric motor **on**



**Exterior lights on**



**EV mode on**