


# FORWARD COLLISION WARNING (FCW)

Alerts you to the possibility of a front-end collision.

## How It Works

At 10 mph or higher, if the radar sensor in the front grille detects a vehicle in front of you and the system determines a collision is likely, the system warns you with the following visual and audible alerts:

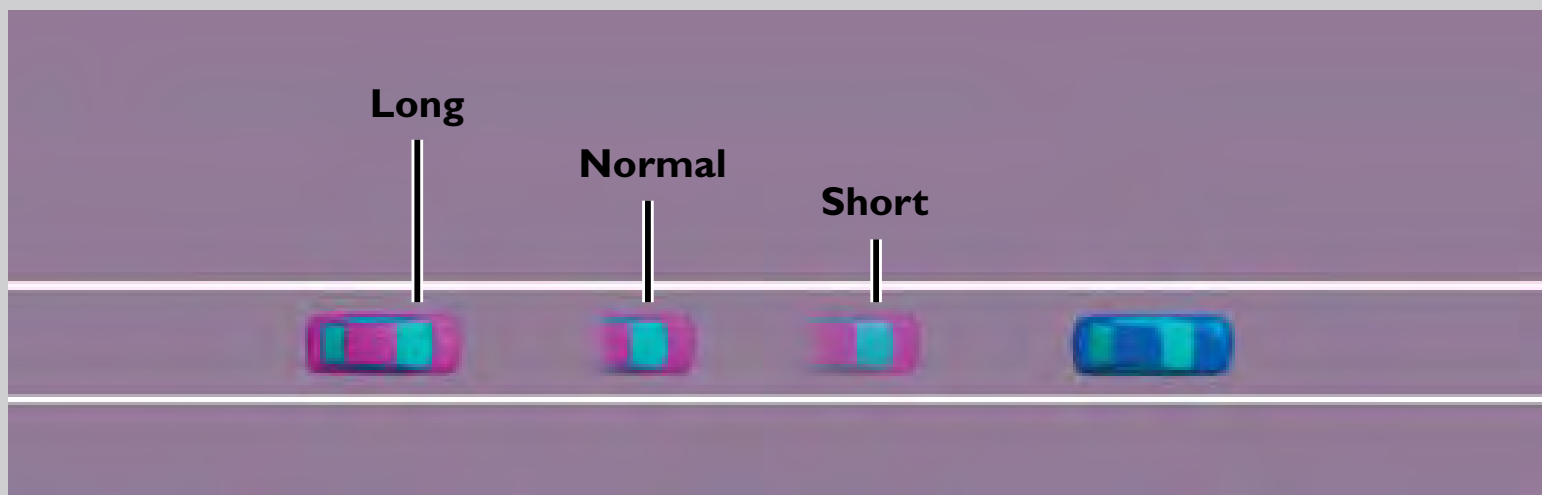


*When the FCW distance is set to Short:*

- the heads-up light near the windshield flashes continuously
- BRAKE flashes continuously
- a beep sounds continuously until you take preventive action.

*When the FCW distance is set to Normal or Long:*

- The heads-up light near the windshield flashes twice.
- If you do not take action to prevent a collision and the distance to the other vehicle becomes sufficiently close, BRAKE flashes on the MID, the heads-up light flashes, and a beep sounds continuously until you take preventive action.

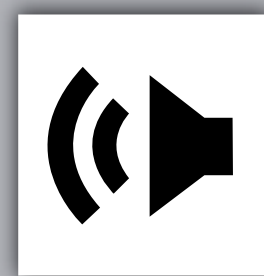

*FCW may not activate under certain conditions. See your Owner's Manual for more information.*

## Changing Settings

Determine the warning timing, or turn the system off.

1. Press **SETTINGS**. Use the interface dial to make and enter selections.
2. Select **Vehicle Settings**.
3. Select **Forward Collision Warning Distance**.
4. Select **Long**, **Normal**, **Short**, or **Off**.
5. Press **BACK** to exit the menu.



*You can also change vehicle settings using the multi-information display.*