

INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.

Manual Transmission Shift Indicators




Note: Indicators do not come on in SPORT mode.



Malfunction Indicators

If an indicator remains on, there may be a problem; see a dealer

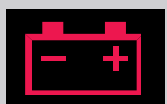

Charging system



Anti-Lock Brake System (ABS)




Low brake fluid, Brake system



IMA System



Low oil pressure

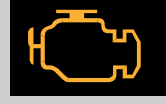


Malfunction lamp (check engine light)



Supplemental Restraint System (SRS)



Vehicle Stability Assist® (VSA)

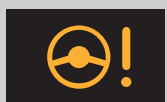

Electric Power Steering (EPS)



Tire Pressure Monitoring System (TPMS) (*blinks and stays on*)



Low engine temperature (*stays on*)



Transmission (*blinks*)

Condition Indicators

Action is needed by driver



Parking brake on:
Release



Seat belt reminder:
Fasten seat belt(s)



Door/Hatch open:
Close door(s) / hatch



Low fuel:
Refill




Low tire pressure:
Add air



High temperature indicator:
Pull over for engine cooling



Message indicator:
See MID

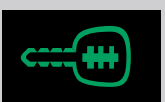

Immobilizer (*blinks*):
Use other vehicle key and see dealer

On/Off Indicators



SIDE AIRBAG **OFF**



NORMAL mode **on**



PASSENGER AIRBAG **OFF**
(center audio panel)



ECON mode **on**



VSA **OFF**



Plus Sport System **on**



Auto Idle Stop **on** (*blinking*)




Fog lights **on** (if equipped)



CRUISE MAIN **on**



Exterior lights **on**

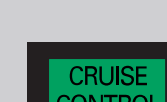

CRUISE CONTROL **on**



Turn signals/hazards **on**



SPORT mode **on**



High beams **on**