

Tire Pressure Monitoring System (TPMS)*

Monitors the tire pressure while you are driving. If your vehicle's tire pressure becomes significantly low, the low tire pressure indicator comes on and a message appears on the display.





■ What to Do

Stop your vehicle in a safe place. Check the tire pressure and adjust the pressure to the specified level on the label on the driver's doorjamb.

■ TPMS Calibration

Any time you inflate, change, or rotate one or more of the tires, you need to recalibrate the system. Use the buttons on the steering wheel to enter and operate the Vehicle Menu.

1. Press MENU.
2. Select Customize Settings.
3. Select TPMS Calibration.
4. Select Initialize.
5. Select Yes.
6. Press MENU to exit.

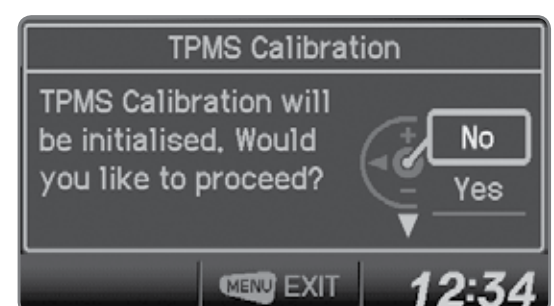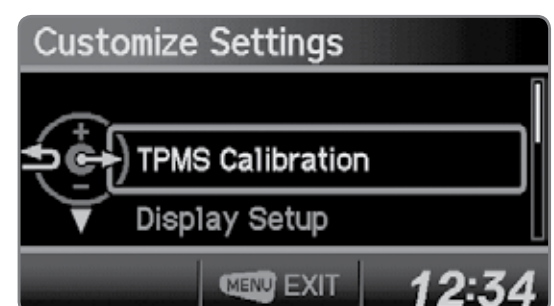

NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the specified pressure.

**if equipped*