


## MULTI-INFORMATION DISPLAY (MID)

Displays various information and messages to help you maintain your vehicle.

### Accessing the Multi-Information Display



When you start the engine, the MID shows your last active selection from the previous drive cycle.

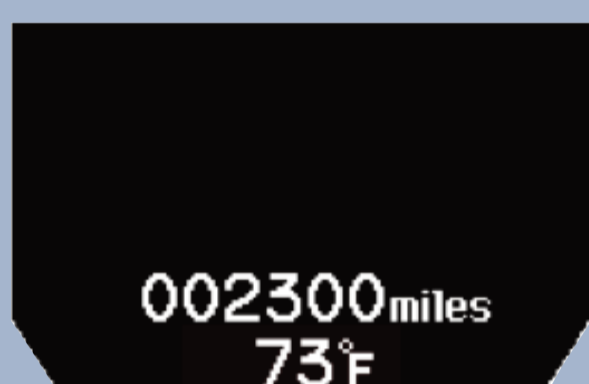

To toggle between the different displays:

- Press either Info button for the upper display.
- Press SEL/RESET for the lower display or to switch from Trip A to Trip B on the upper displays.



### MID Upper Displays


Main display



Average fuel economy, Instant fuel economy



Customize settings

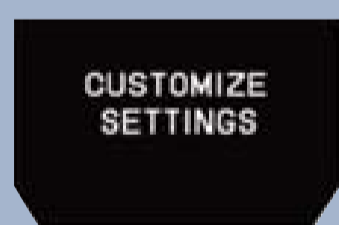

Fuel range



Average speed




Elapsed time



### MID Lower Displays


Odometer, Outside temperature

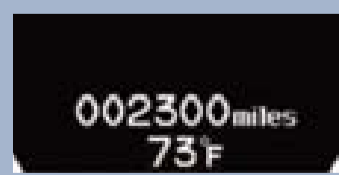

Trip A, Outside temperature



Oil life

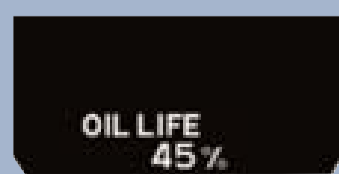

Trip B, Outside temperature

