


# PARKING SENSOR SYSTEM

Warns you of the proximity between your vehicle and nearby surrounding objects when parking or backing up.


## How It Works

When the system senses an object, an indicator appears on the MID and center display screen and a beep sounds. As you get closer to the object, the beep rate increases.


### Corner sensors

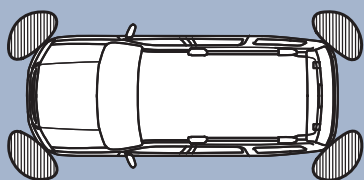


Within about 2 ft.

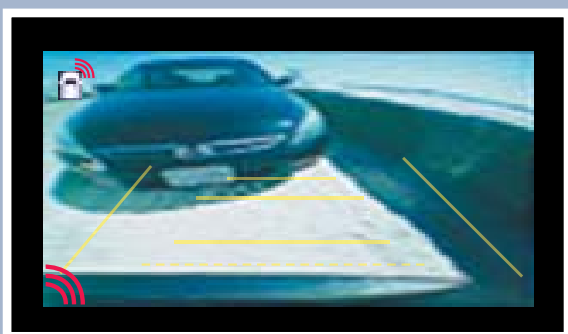

### Rear center sensors

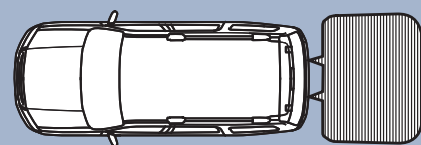

Within about 3.5 ft.

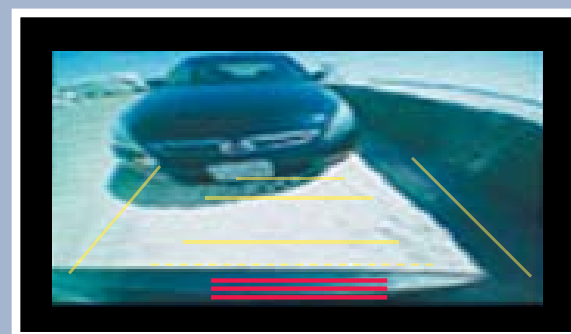

## Turning the System On and Off

Press the parking sensor button. A light appears when the system is on.

