 
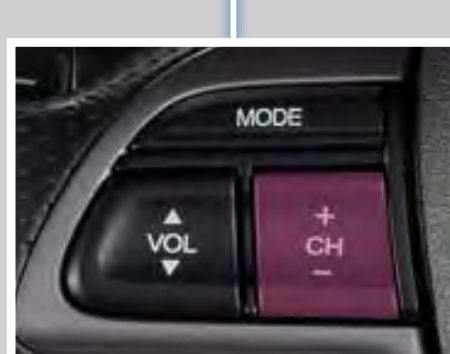 
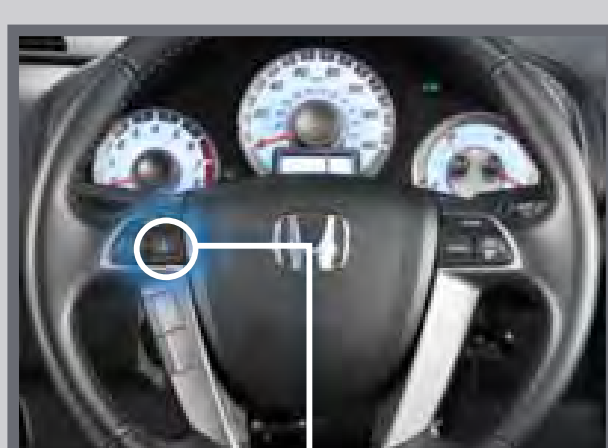 
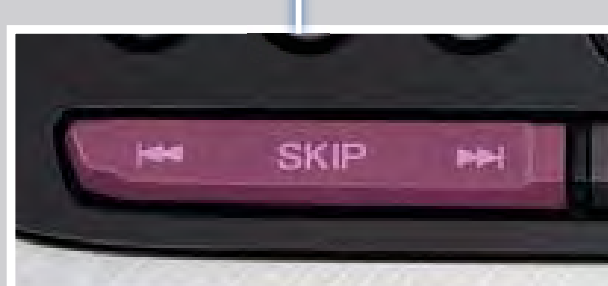 


BLUETOOTH® AUDIO

Play stored or streaming audio from your compatible phone through your vehicle's audio system. Visit handsfreelink.honda.com to check if this feature is compatible with your phone.

Playing Bluetooth Audio

1. Make sure your phone is on and paired to Bluetooth® HandsFreeLink®
2. Press USB/AUX until Bluetooth Audio appears on the screen.
3. From your phone, open the desired audio player or app and begin playing. Sound is redirected to the audio system.
4. Press (⏮) (⏭) or (+) (-) to change tracks.

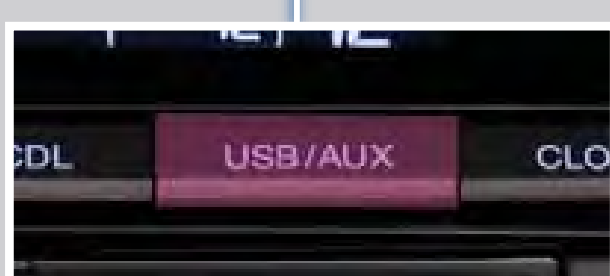

3. From your phone, open the desired audio player or app and begin playing. Sound is redirected to the audio system.

Make sure the volume on your phone is properly adjusted.

Notes:

 
- You may need to enable additional settings on your phone for playback.
- The play/pause function and remote audio controls may not be supported on all phones.
- Operate your phone only when your vehicle is stopped.

iPod® OR USB FLASH DRIVE

Play audio files from your compatible iPod or USB flash drive through your vehicle's audio system.




Connecting Devices and Playing Audio

1. Open the center console, and pull out the USB adapter cable.
2. Press USB/AUX until iPod or USB appears.
3. Press (⏮) (⏭) or (+) (-) to change tracks.

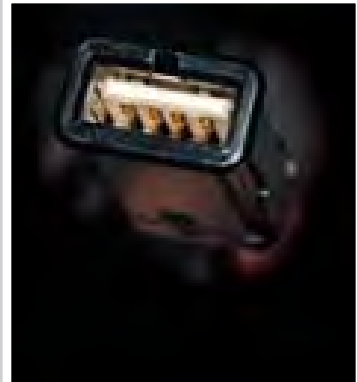

Connect the USB connector to your iPod cable or flash drive.

   2. Press USB/AUX until iPod or USB appears.

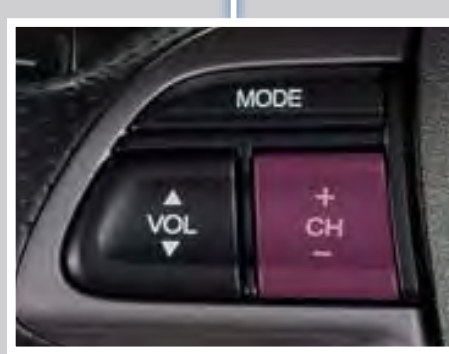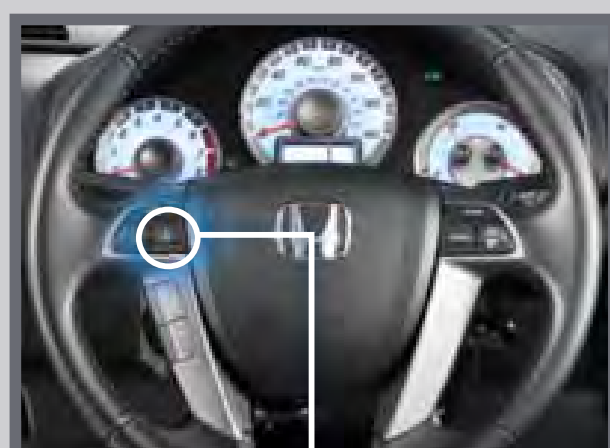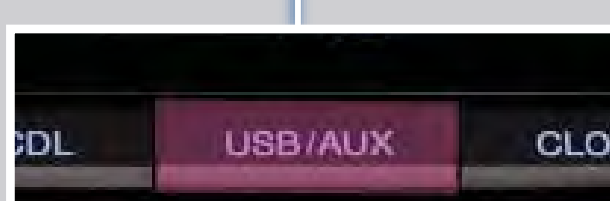

Note: Connect your device only when your vehicle is stopped.

iPod is a trademark of Apple, Inc.

 
CD LIBRARY

Store up to 18 audio CDs in the system memory.


Recording an Audio CD

Use the selector knob to make and enter selections.

1. Insert an audio CD.

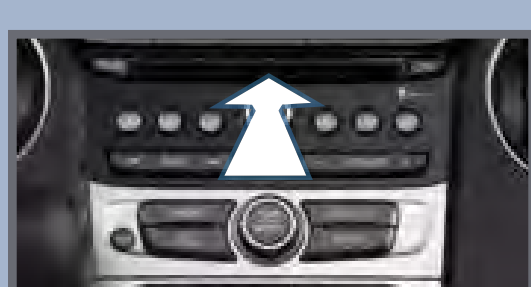

 2. The system asks if you want to record the CD to memory. Select Yes.

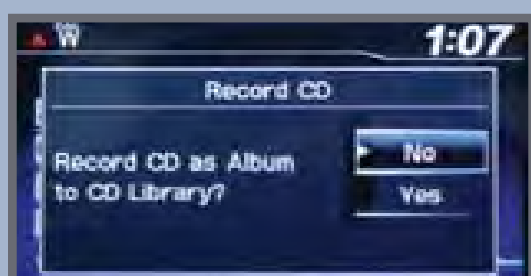

3. Select the location to store the CD.



4. The CD records. If available, album information is displayed.



Note: Albums can be selected from the CD library only if recorded in their entirety. Partially recorded albums may appear, but they cannot be played.

Using the CD Library

Use the selector knob to make and enter selections.

1. Press CD/CDL. The last album recorded begins playing.



Press (⏮) (⏭) or (+) (-) to change tracks.

Press CATEGORY (+) (-) to change albums.

2. Press the selector knob to view the CD library.



3. A list of recorded CDs appears. Select the album and track you want to hear.

