

AUDIO AND CONNECTIVITY

Learn how to operate the vehicle's audio system.


Basic Audio Operation

Connect audio devices and operate buttons and displays for the audio system.

■ USB Port

1. Open the cover in the front console.
2. Connect a USB flash drive or iPod/iPhone® cable connector to the USB port.

An additional USB port* is located in the center console.

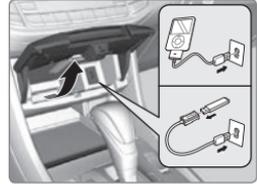


iPod and iPhone are trademarks of Apple, Inc.

■ Auxiliary Input Jack*

Connect standard audio devices with a 1/8-inch (3.5 mm) stereo miniplug.

1. Open the AUX cover on the audio panel.
2. Insert the miniplug attached to the audio device into the jack. The audio system switches to AUX mode. Use the device to control the audio.

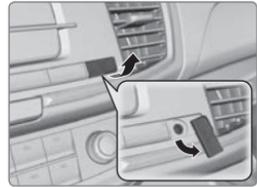

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

■ Accessory Power Socket

Open the socket cover in the front console to use power when the vehicle is on.

There is an additional power socket inside the center console.



NOTICE

Do not insert an automotive type cigarette lighter element. This can overheat the power socket.

■ Steering Wheel Controls

You can operate certain functions of the audio system using the steering wheel controls.

SOURCE button: Cycle through available audio modes.

◀/▶ buttons: Change presets, tracks, albums, or folders.

+ / - buttons: Adjust audio volume.

MENU button*: On vehicles with touchscreen, press to view options for the current audio source. Use the other buttons to navigate through the options.

FM/AM/SiriusXM® Radio

Press ▶ or ◀ for the next or previous station.

Press and hold ▶ or ◀ for the next or previous strong station.

CD/iPod®/USB/Bluetooth® Audio

Press ▶ or ◀ for the next or previous track.

Press and hold ▶ or ◀ for the next or previous folder (CD/USB).

Pandora® (U.S. only)

Press ▶ for the next song.

Press and hold ▶ or ◀ for the next or previous station.



■ Adjusting the Sound

Adjust various sound settings.

Using the **SETTINGS** button*

Use the selector knob to make and enter selections.

1. Press the **SETTINGS** button.
2. Select Audio Settings.
3. Select Sound.
4. Select a sound mode to change, and adjust it using the selector knob.
5. Press the **BACK** button to exit the menu.



Using the touchscreen*

Touch items on the screen to make and enter selections.


1. From the **HOME** screen, select Settings.
2. Select Audio.
3. Select Sound.
4. Select the tabs to change the sound mode and adjust the setting.
5. Select **OK** when complete.



Models with one display

One Display Audio Operation

Control audio operation using the dashboard buttons.

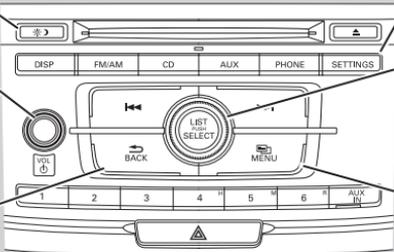

*** button:** Adjust display brightness.

Power/volume knob: Press to turn the audio system on or off. Rotate to adjust volume.

BACK button: Return to the previous screen.

SETTINGS button: Display settings options.

Selector knob: Rotate and press to make and enter selections.

MENU button: Display menu items for the selected audio mode.



Main display



Press the display button to change displays.



Models with one display

FM/AM Radio


Play FM or AM radio stations.

FM/AM button:

Select a band.

Preset buttons (1-6):

Press and hold a preset button to store the current station. Press a preset button to select a previously stored station.

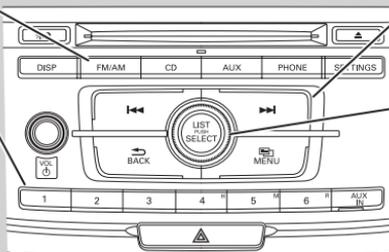


Seek/Skip buttons:

Find the next or previous strong station.

Selector knob:

Rotate to tune radio frequency.

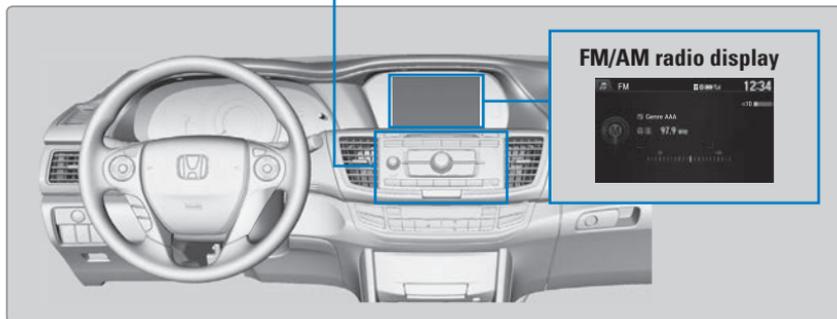



FM/AM radio display



Models with one display

Compact Disc (CD)

The audio system supports audio CDs, CD-Rs, and CD-RWs in MP3, WMA, or AAC formats.

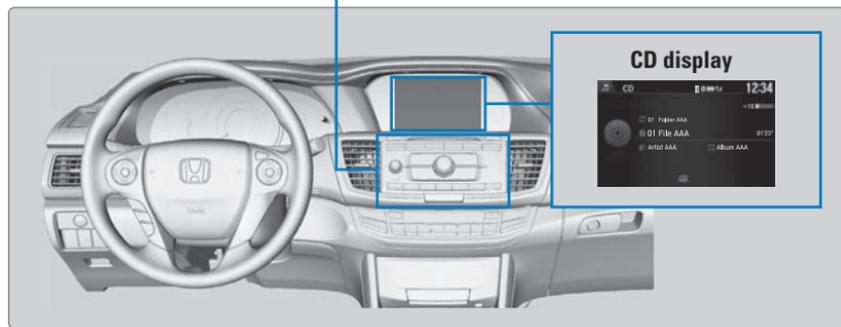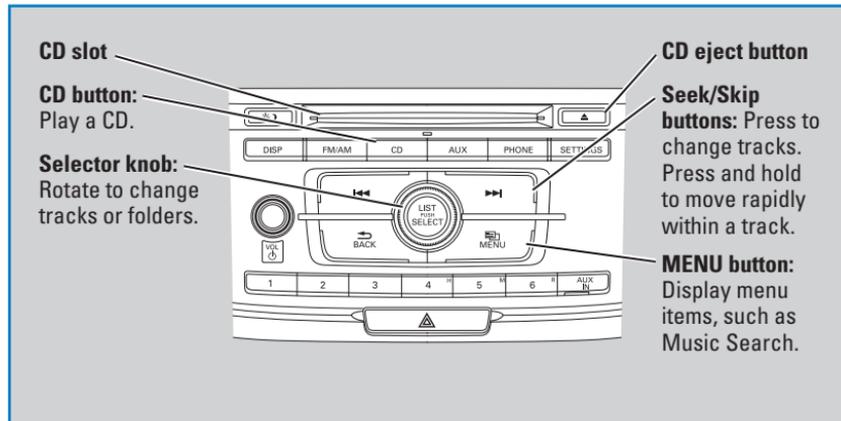

■ Searching for Music

Use the selector knob to search for tracks stored on the CD.

1. From the audio screen, press the MENU button.
2. Select Music Search.
3. Select the folder or track you want to play.





NOTICE

Do not use CDs with adhesive labels or insert a damaged CD. Inserting these types of CDs may cause them to get stuck or damage the audio unit.

Models with one display

iPod®

Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port.

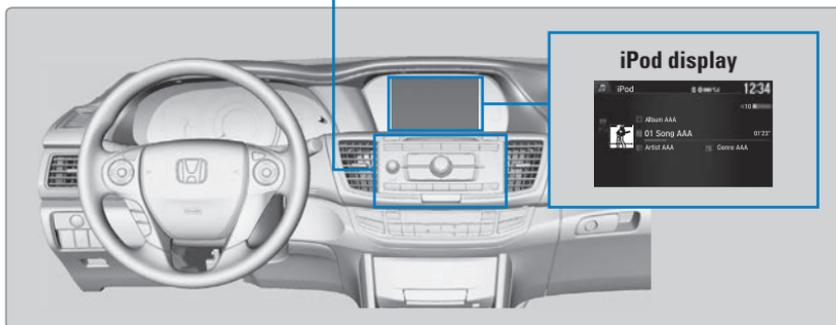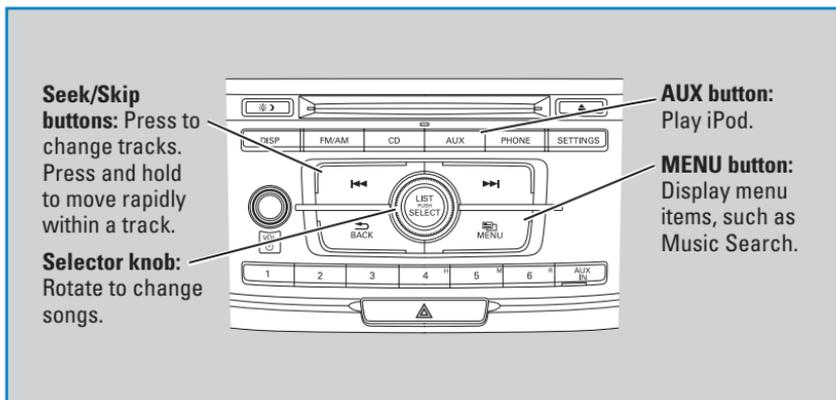

■ Searching for Music

Use the selector knob to search for tracks stored on the iPod.

1. From the audio screen, press the MENU button.
2. Select Music Search.
3. Select a search category.
4. Select the track you want to play.





iPod is a trademark of Apple, Inc.

Models with one display

USB Flash Drive

Play and operate a USB flash drive through the vehicle's audio system. Only MP3, WMA, or AAC formats are supported. Connect your device to the USB port.

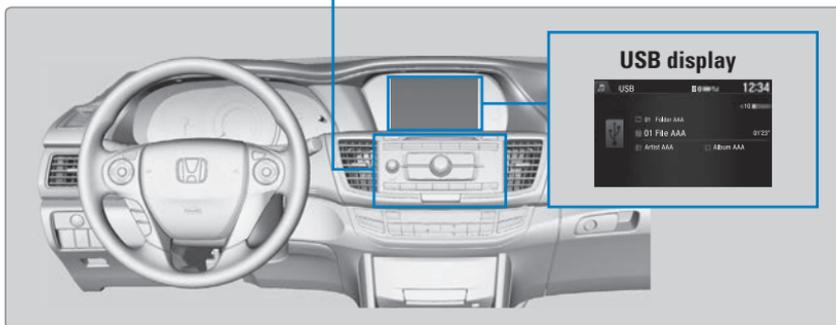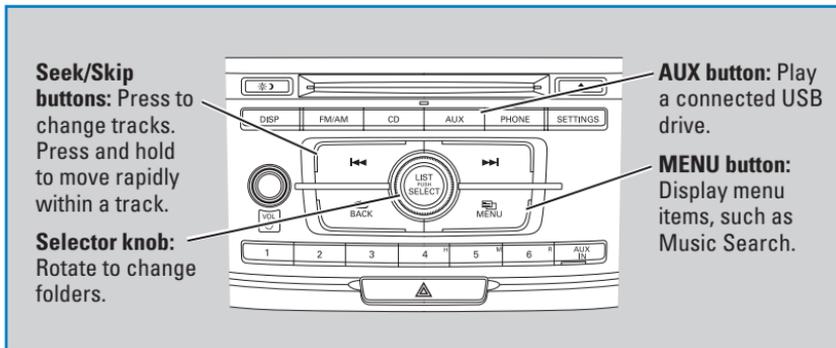

■ Searching for Music

Use the selector knob to search for tracks stored on the USB flash drive.



1. From the audio screen, press the MENU button.
2. Select Music Search.
3. Select a folder.
4. Select the track you want to play.



Models with one display

Bluetooth® Audio

Play streaming or stored audio from your compatible phone through the vehicle's audio system. Connect your phone to *Bluetooth® HandsFreeLink®*. Visit handsfreelink.com (U.S.) or handsfreelink.ca (Canada) to check phone compatibility. Standard data rates apply.

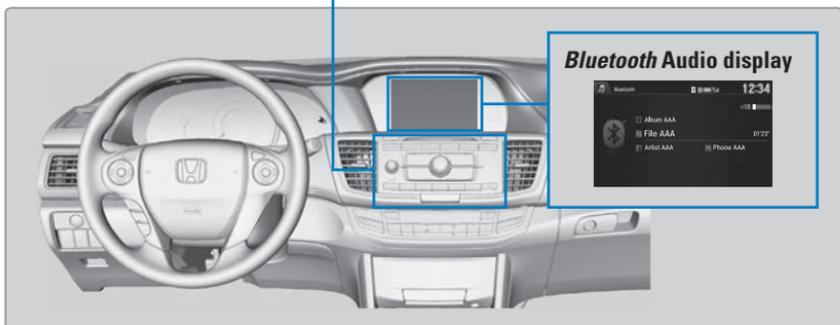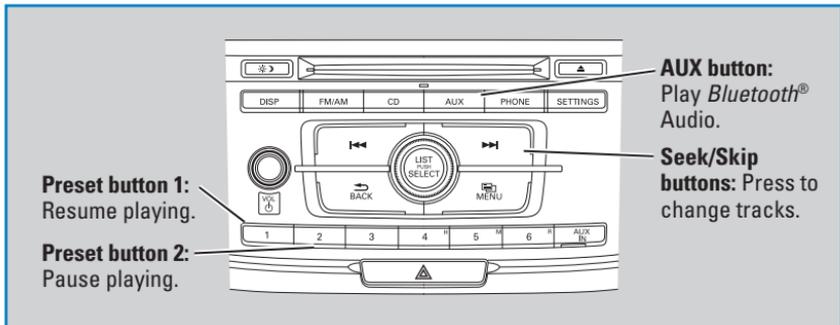**Notes:**

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional settings on your phone for playback.
- The resume/pause function and remote audio controls are not supported on all phones.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle. Only launch streaming audio on your phone when it is safe to do so.