

BLUETOOTH® HANDSFREELINK® (HFL)

Learn how to operate the vehicle's hands-free calling system.

Models with one display

Basic HFL Operation

Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit handsfreelink.com (U.S.) or handsfreelink.ca (Canada) to check phone compatibility.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.


■ HFL Controls

Use the controls to enter information and make selections.

Pick-Up button: Answer an incoming call.


Hang-Up/Back button: End or decline a call, or cancel an operation.

Talk button: Make a call using a stored voice tag.

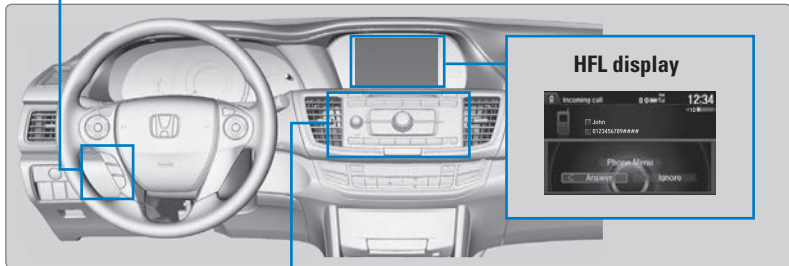

Selector knob:
Rotate and press to make selections.

BACK button:
Go back to the previous display.

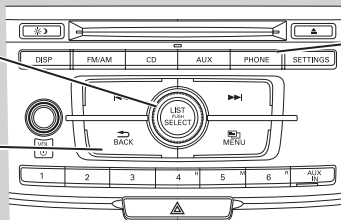

PHONE button:
Display the phone screen.

Models with one display

Pairing a Phone



To use hands-free phone and streaming audio functions, you must first pair your phone to the system. This can only be done when the vehicle is stopped. Use the selector knob or interface dial to make and enter selections.

1. Press the SETTINGS button.
2. Select Phone Settings.
3. Select Bluetooth Device List (if no phone has been paired) or Connect Phone (if pairing an additional phone).
4. Select Add Bluetooth Device.
5. Make sure your phone is in discovery mode.
6. The system searches for your phone. Select your phone when it appears on the list.

If your phone does not appear:

Select Phone Not Found and search for HandsFreeLink from your phone.

7. The system gives you a pairing code. Compare it to the code that appears on your phone, and connect when prompted.
8. The system asks if you want to enable Automatic Phone Sync, which imports your phone's call history and phonebook. Select On.
9. Press the BACK button to exit the menu.

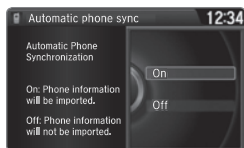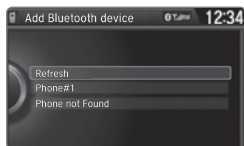

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

Models with one display

Making a Call

You can make a call using several methods.

■ Dialing a Number

Enter a 10-digit phone number to call.

Using voice commands

Press the Talk button before you say each command.


1. Say *“Dial by number.”*
2. Say the phone number. For example, *“3-1-0-5-5-5-1-2-3-4.”*
3. The system begins to dial.



Using the menu

Use the selector knob or interface dial to make and enter selections. This method is inoperable while the vehicle is moving.


1. Press the PHONE button.
2. Press the MENU button.
3. Select Dial.
4. Enter the phone number. Select the green phone icon to call.

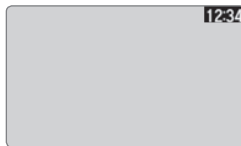

■ Storing Speed Dial Entries

Store up to 20 numbers for quick dialing. Use the selector knob or interface dial to make and enter selections.

1. Press the PHONE button.
2. Press the MENU button.
3. Select Speed Dial, then select New Entry.
4. Select an entry method.
5. If desired, you can create a voice tag for the number. Follow the prompts.

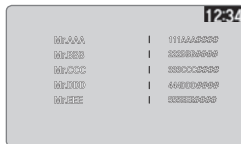

When a voice tag is created, you can press the Talk button and say *“Call”* and the stored voice tag to quickly call the number.

