

INSTRUMENT PANEL

Learn about the indicators, gauges, and displays related to driving the vehicle.



Indicators briefly appear with each engine start and then go out. Red and amber indicators are most critical. Blue and green indicators are used for general information.

Malfunction Indicators

These are the most critical indicators. If they come on and stay lit while driving or at any other time, there may be a problem. See your dealer if necessary.

BRAKE Brake system

U.S.



Canada

- Brake fluid is low.
- The brake system has a problem.

Press the brake pedal lightly to check pedal pressure. If normal, check the brake fluid level when you stop. If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking. Have your vehicle repaired immediately.



Low oil pressure

Engine oil pressure is low. Stop in a safe place. Open the hood. Check the oil level, and add oil if necessary. If the indicator does not turn off, have your vehicle repaired immediately.



Charging system

The battery is not charging. Turn off all electrical items, but do not turn off the vehicle to prevent further battery discharge. Have your vehicle repaired immediately.



Supplemental Restraint System (SRS)

There is a problem with one of the airbag systems or seat belt tensioners.



Smart Entry system*

There is a problem with the smart entry system.

**if equipped*



Malfunction indicator lamp (check engine light)

- The emissions control system may have a problem, or the fuel cap is loose or missing.
- (Blinks) A misfire in the engine's cylinders is detected. Stop in a safe place, and wait for the engine to cool down.



Anti-lock Brake System (ABS)

There is a problem with the anti-lock brake system. Your vehicle still has normal braking ability, but no anti-lock function.



Tire Pressure Monitoring System (TPMS)*

There is a problem with the tire pressure monitoring system, or the vehicle is fitted with the compact spare tire.



Light control*

There is a problem with the automatic lighting control system or low beam headlights.



Parking sensor system*

There is a problem with the system, or the sensor(s) are blocked.



Collision Mitigation Braking System™ (CMBS™)*

There is a problem with the system, the temperature is too high, or the camera is blocked.



Vehicle Stability Assist (VSA®)

There is a problem with the VSA system.



Brake system

There is a problem with the brake system.



Electric Power Steering (EPS)

There is a problem with the EPS system.



Auto High-Beam System*

There is a problem with the system, or the camera is blocked.



Starter system*

There is a problem with the starter system. If you cannot start the vehicle, press the brake pedal, then press and hold the ENGINE START/STOP button for 15 seconds.



Adaptive Cruise Control (ACC)*

There is a problem with the system, the temperature is too high, or the radar sensor is blocked.

LKAS Lane Keeping Assist System (LKAS)*

There is a problem with the system, the temperature is too high, or the camera is blocked.

**Road Departure Mitigation (RDM)***

There is a problem with the system, the temperature is too high, or the camera is blocked.

Condition Indicators

These indicators may require you to perform an action.

**Parking brake**

Release the parking brake before driving. You will hear a beep if you drive with it not fully released.

**Seat belt reminder**

Make sure seat belts are fastened for you and all passengers. The indicator blinks and beeps sound continuously if you or your front passenger has not fastened your seat belts when you begin driving. If the indicator remains on after seat belts are fastened, see your dealer.

**Door open**

A door is not closed. A beep sounds if a door is open while driving.

**Low fuel**

Refuel as soon as possible. If the indicator blinks, there is a problem with the fuel gauge. See your dealer.

**Low tire pressure***

Stop in a safe place, check tire pressures, and inflate tire(s) if necessary. The indicator also appears if your vehicle is fitted with the compact spare tire. Have your regular tire repaired or replaced as soon as possible.

**Washer fluid level (Canadian models)**

The washer fluid is low. Refill the washer fluid.

**System message***

When a condition or malfunction indicator comes on, a message also appears on the multi-information display. Check the display for more information.

**Maintenance Minder™***

Scheduled maintenance for your vehicle is due.



Immobilizer

Your key or remote transmitter cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the engine. Turn the vehicle off, and then on again. If it continues to blink, there may be a problem with the system. See your dealer.

On/Off Indicators

These indicators remind you when an item is on or off.



VSA off



VSA engaged (blinking)



CRUISE MAIN on



CRUISE CONTROL on



ACC* on



LKAS* on



CMBS™* off



Turn signals/hazards on



Fog lights* on



High beams on



Exterior lights on



Auto High-Beam System* on




ECON mode* on


**if equipped*

Information Display*

Consists of several displays that provide you with useful information.

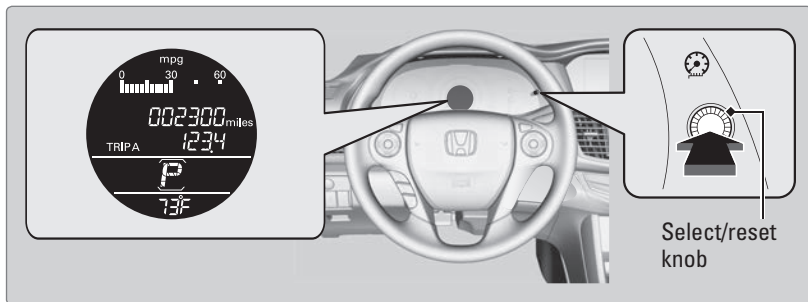


Press the select/reset knob to cycle through the displays shown below.

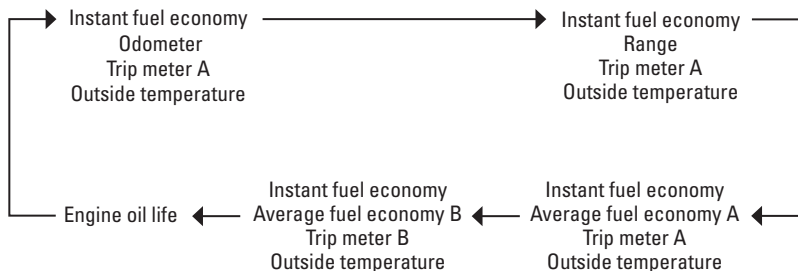

**if equipped*


Multi-Information Display (MID)*

Consists of several displays that provide you with useful information.

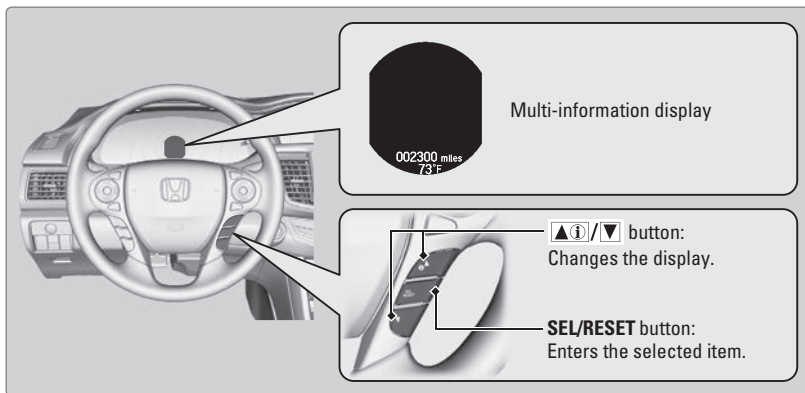


■ Main Displays

Press either Info (▲/▼) button to cycle through the displays shown below.

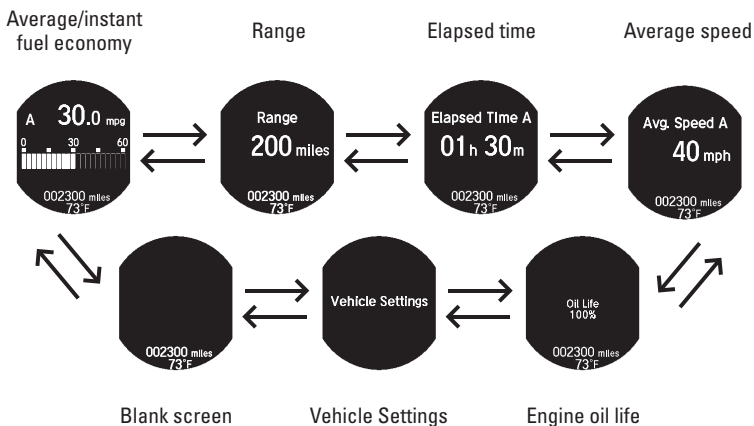

■ Lower Displays

Press the SEL/RESET button to cycle through the displays shown below.

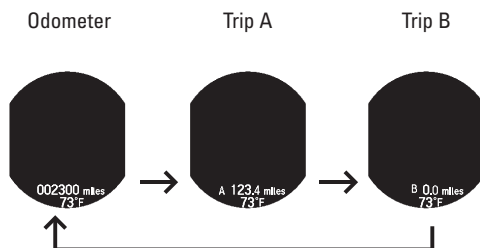

■ Vehicle Settings


Use the MID to customize certain vehicle features when the vehicle is in Park (P) or the parking brake is applied. You can also use the SETTINGS button*.

An example of how to change the Trip A reset timing setting is below. Use the Info (▲/▼) and SEL/RESET buttons to make and enter selections.

1. Scroll to the Vehicle Settings menu and select it.



2. Scroll to Meter Setup and select it.

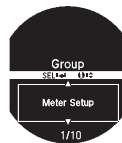

3. Scroll to "Trip A" Reset Timing and select it.



4. Scroll through the options, and select the one you want.

5. Scroll to Exit, and select it to exit the menus.

