


## Seat Heaters\*

Quickly warm the seats when the vehicle is on.

Press the seat heater switch to the LO or HI position. An indicator appears for the selected setting. Return the switch to the middle position to turn off. The switch for the front seat heaters is located in the front console.

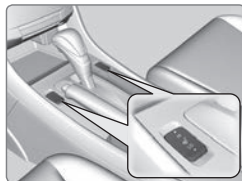

The switch for the rear seat heaters is located on the rear door. The rear middle seat does not have heating.



### **WARNING**

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

*\*if equipped*