


Climate Control System*


The automatic climate control system can maintain your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed. Use the buttons on the dashboard to control the system.

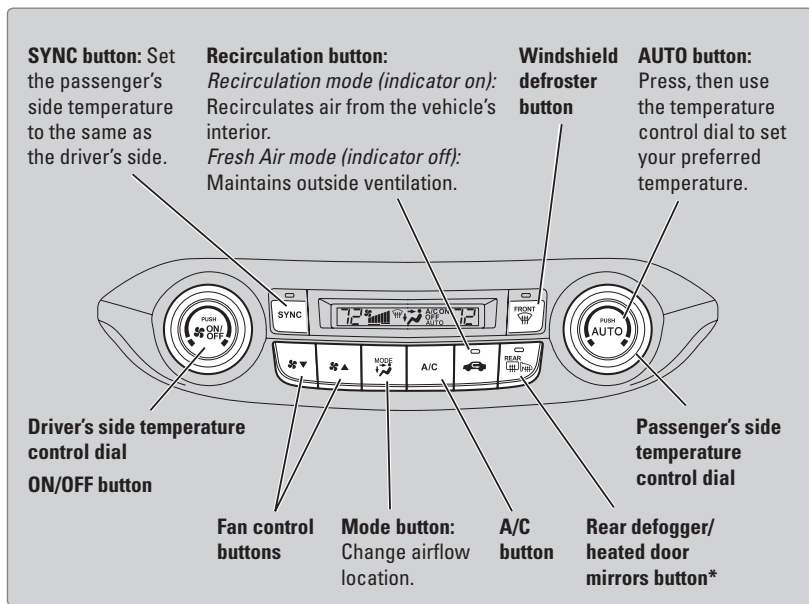

■ Heated Windshield Button**

Press the heated windshield button to deice the windshield when the vehicle is on.

When the outside temperature is below 4°C, the heated windshield may automatically activate. The system deactivates itself once the outside temperature reaches 6°C.

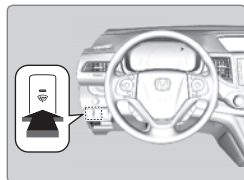

*if equipped
 **Canadian models