

## Models with Display Audio and SYNC button

**Selected temperature display**

**A/C:** Turn air conditioning on or off.

**MODE:** Select airflow location.

**Fan speed:** Select a setting.




**Driver's temperature control dial**

**AUTO button:** Press, then use the temperature control dial to set your preferred temperature.

**CLIMATE button:** Select climate options on the touchscreen.

**SYNC button:** Set the passenger's side temperature to the same as the driver's side.

**Passenger's temperature control dial**

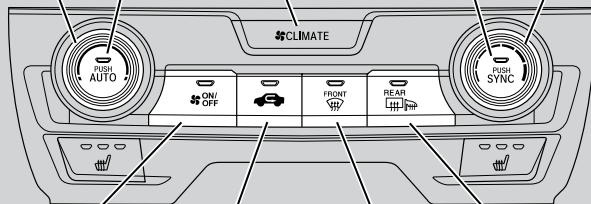

**ON/OFF button**

**Recirculation button:**  
*Recirculation mode (indicator on):* Recirculates air from the vehicle's interior.  
*Fresh air mode (indicator off):* Maintains outside ventilation.

**Windshield defroster button**

**Rear defogger/heated door mirrors button**