








 




## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



### Malfunction Indicators


 

If an indicator remains on, there may be a problem; see your dealer

	Charging system		Anti-Lock Brake System (ABS)
	Low brake fluid, brake system		Malfunction lamp (check engine light)
	Low oil pressure		Vehicle Stability Assist® (VSA)
	Supplemental Restraint System (SRS)		Blind Spot Information (BSI)*
	Forward Collision Warning (FCW)		Brake override system
	Lane Departure Warning (LDW)		Smart Entry system












### Condition Indicators

Action is needed by driver

	Parking brake on: <b>Release</b>		Low fuel: <b>Refill</b>
	Door/Tailgate open: <b>Close door(s)/tailgate</b>		System message indicator: <b>See MID</b>

	Seat belt reminder: <b>Fasten seat belt(s)</b>		Immobilizer ( <i>blinks</i> ): <b>Use other vehicle key and see your dealer</b>
	Low tire pressure: <b>Add air</b>		

### On/Off Indicators

	<b>PASSENGER AIRBAG OFF</b> (located on center panel)		Fuel economy <b>on</b>
	<b>VSA OFF</b>		Exterior lights <b>on</b>
	<b>BSI* off</b>		Turn signals/hazards <b>on</b>
	<b>FCW off</b>		<b>CRUISE MAIN on</b>
	High beams <b>on</b>		<b>CRUISE CONTROL on</b>
	Fog lights <b>on</b>		

\*Touring Elite only