

Car wash mode

If you are driving through a conveyor-style car wash where you or the attendant do not remain in the vehicle, follow these steps while the engine is on:

1. Press and hold the brake pedal.
2. Press and release N (Neutral).
3. Press and hold N again for two seconds. The engine remains on, and the transmission remains in Neutral. To turn off the engine but keep the transmission in Neutral, press the ENGINE START/STOP button.

The transmission remains in Neutral for 15 minutes. After 15 minutes, the gear position changes to Park and the vehicle turns off.

**if equipped*

■ Electronic Gear Selector*

Park (P): Used for parking or starting or turning off the vehicle. Press P with the brake pedal pressed. A red indicator appears.

Reverse (R): Used for reversing. Pull back R. A green indicator appears.

Neutral (N): Used for idling. Press N. A red indicator appears.

Drive (D/S): Used for normal driving (D) or driving in sequential mode (S). Press D/S once for normal driving. Press D/S twice for sequential mode driving. A green indicator appears. Make sure the parking brake is released.



WARNING

The vehicle can roll away if left unattended without confirming that Park is engaged. Always keep your foot on the brake pedal until you have confirmed that P is shown on the gear position indicator.

NOTICE

When you change from D to R and vice versa, press the brake pedal and come to a complete stop, then select the intended gear position while maintaining brake pressure.

Auto park mode

For your convenience, Park (P) is automatically selected when all of the following conditions are met:

- The vehicle is stopped.
- The driver's seatbelt is unbuckled.
- The driver's door is opened.

Car wash mode

If you are driving through a conveyor-style car wash where you or the attendant do not remain in the vehicle, follow these steps while the engine is on:

1. Press and hold the brake pedal.
2. Press and release N (Neutral).
3. Press and hold N again for two seconds. The engine remains on, and the transmission remains in Neutral. To turn off the engine but keep the transmission in Neutral, press the ENGINE START/STOP button.

The transmission remains in Neutral for 15 minutes. After 15 minutes, the gear position changes to Park and the vehicle turns off.

■ Sequential Mode*

Use the paddle shifters to change gears without removing your hands from the steering wheel.

(-) Paddle shifter:
Pull to shift down to a lower gear.





(+) Paddle shifter:
Pull to shift up to a higher gear.



Recommended shift points

Shift up	Normal acceleration
1st to 2nd	15 mph (24 km/h)
2nd to 3rd	25 mph (40 km/h)
3rd to 4th	40 mph (64 km/h)
4th to 5th	47 mph (76 km/h)
5th to 6th	52 mph (84 km/h)
6th to 7th	57 mph (92 km/h)
7th to 8th	62 mph (100 km/h)
8th to 9th	67 mph (108 km/h)

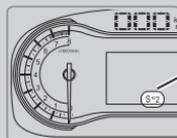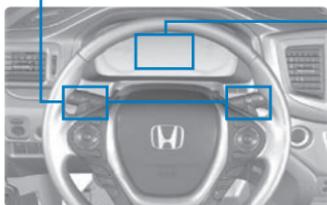

M indicator/gear position indicator

When the transmission is in D: Press D/S once. The vehicle goes into sequential shift mode momentarily, and the gear selection indicator comes on. When you start traveling at a constant speed, sequential mode and the gear position indicator automatically go off.

When the transmission is in S: Press D/S twice. The vehicle goes into sequential mode, and the M (sequential mode) indicator and gear selection indicator come on. Use the paddle shifters to change gears.

To cancel this mode, hold the + paddle shifter for two seconds or press D/S again. The M indicator and gear selection indicator go off.