

## Power Tailgate Operation\*

Use these methods to operate the power tailgate.

### ■ Power Tailgate Button

The vehicle must be in Park (P) with all doors unlocked.


Press and hold the power tailgate button on the door to open the tailgate. Press it again at any time to close it.



### ■ Tailgate Release Button

Press the tailgate release button. A beep sounds, and the tailgate opens and lifts automatically.

If there is not enough clearance for the power tailgate to fully open, press and hold the tailgate release button. A beep sounds, followed by two beeps. The tailgate unlatches, and you can open it manually.

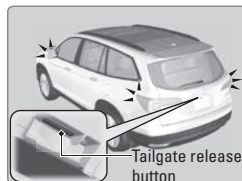

### ■ Power Tailgate Close Button

Press the power tailgate close button to automatically close the tailgate. Press it again at any time to reverse the tailgate direction.



## WARNING

Closing the power tailgate while anyone is in the path of the tailgate can cause serious injury.

Make sure everyone is clear before closing the tailgate.

## NOTICE

Do not push or pull on the power tailgate when it is being automatically opened or closed. Forcibly opening or closing the power tailgate while in operation can deform the tailgate frame.