


Models with touchscreen

**SiriusXM® Radio\***

Available on a subscription basis only. For more information or to subscribe, contact your dealer, or visit [www.siriusxm.com](http://www.siriusxm.com) (U.S.) or [www.sirius.ca](http://www.sirius.ca) (Canada).



**Source:** Select the XM icon.

**Scan:** Scan each station with a strong signal.

**Category:** Change the category.


**Presets:** Select and hold a preset number to store the current station. Select a preset number to select a previously stored station.

**Channel:** Change the channel. Press and hold to skip 10 channels at a time.

**Open/close:** Display or hide the channel list or preset list.

**TAG\*:** Tag a song to store to an iPod/iPhone for later purchase or download.

**Skip:** Change the selection. Press and hold to skip rapidly.

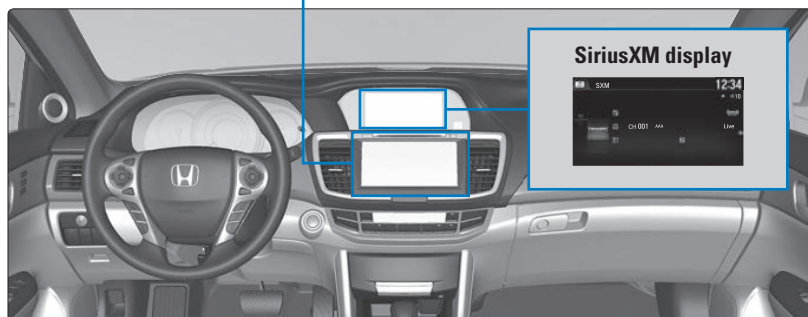

To learn about additional features—such as multi-channel preset, replay, or SportsFlash—see your Owner’s Manual on the Owner Information CD or visit [owners.honda.com](http://owners.honda.com) (U.S.) or [myhonda.ca](http://myhonda.ca) (Canada).