

## Models with Display Audio

### SMS Text Messaging and E-Mail\*

Certain phones can receive and send messages when paired and connected. Visit [handsfreelink.com](http://handsfreelink.com) (U.S.) to check phone compatibility. Standard message rates apply with your phone service provider. This feature is limited while the vehicle is moving.


#### ■ Selecting an Account

If your phone has both text message and e-mail accounts, you can select only one of them at a time to be active and receive notifications.

1. From the Home screen, select Settings.
2. Select Phone.
3. Select Text/Email
4. Select Select Account.
5. Select a text message or e-mail account.

To enable new message notification:

6. Return to the Text/Email menu
7. Select New Message Notification
8. Select On

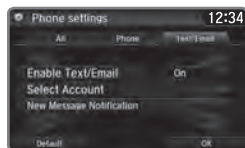

#### ■ Receiving and Responding to Messages

When you receive a new message, a pop-up appears on the touchscreen. You can view the message when the vehicle is stopped. You can also reply to it using fixed phrases or call the sender.

1. When the prompt appears, select Read.
2. The message is displayed, and the system reads it aloud.

*To reply:* With the message open, select Reply, and choose one of the six available responses. Select Send to send the message. You cannot create a new text message.

*To call the sender:* With the message open, select Dial.

