

### ■ Steering Wheel Controls

You can operate certain functions of the audio system using the steering wheel controls.

#### Models with information display

**SOURCE button:** Cycle through available audio modes.

**+ / - buttons:** Adjust audio volume.

**◀ / ▶ buttons:** Change presets, tracks, albums, or folders.



#### FM/AM Radio

Press **◀** or **▶** for the next or previous preset station.

Press and hold **◀** or **▶** to seek the next or previous strong station.

#### iPod®/USB/Bluetooth® Audio

Press **◀** or **▶** for the next or previous track.

Press and hold **◀** or **▶** for the next or previous folder (USB).

#### Models with Driver Information Interface

**INFO button:** Press until the audio screen is displayed in the Driver Information Interface.

**+ / - bar:** Press the ends of the bar or slide to adjust audio volume.

**◀ / ▶ buttons:** Change presets, tracks, albums, or folders.



#### FM/AM/SiriusXM® Radio\*

Press **◀** or **▶** for the next or previous preset station.

Press and hold **◀** or **▶** to seek the next or previous strong station.

#### iPod®/USB/Bluetooth® Audio

Press **◀** or **▶** for the next or previous track.

Press and hold **◀** or **▶** for the next or previous folder (USB).

#### Pandora®

Press **▶** for the next song.

Press and hold **◀** or **▶** for the next or previous station.

## ■ Steering Wheel Controls (continued)

### Models with Driver Information Interface (continued)

**▲ / ▼ buttons:** Cycle through available audio modes, or scroll through audio options in the Driver Information Interface

**ENTER button:** Make audio selections in the Driver Information Interface.

From the audio screen in the Driver Information Interface:

#### FM/AM/SiriusXM® Radio\*

Press the ENTER button to display a preset list. Press ▲ or ▼ to scroll the list, and press the ENTER button to select a preset.

#### USB Flash Drive

Press the ENTER button to display the folder list. Press ▲ or ▼ to scroll the list, and press the ENTER button to select a folder. Repeat to select a track.

#### iPod®

Press the ENTER button to display the iPod list. Press ▲ or ▼ to scroll the category, and press the ENTER button to select an item. Repeat to select a track.

#### Bluetooth® Audio

Press the ENTER button to display the track list. Press ▲ or ▼ to scroll the list, and press the ENTER button to select a track.

#### Pandora®

Press the ENTER button to display the station list. Press ▲ or ▼ to scroll the list, and press the ENTER button to select a station.