

Exterior Lights

Operate exterior lights when the vehicle is on or off.

■ Exterior Lights

Rotate the switches on the headlight lever to operate the exterior lights.


OFF: All exterior lights are off.

☞☞: Turn on exterior lights except headlights.

AUTO: Turn on the automatic lighting feature. Headlights turn on or off depending on ambient brightness when the vehicle is on. Headlights automatically come on after the wipers are engaged for a certain time.

☞○: Turn on all exterior lights including headlights.

☞D: Turn fog lights* on or off.

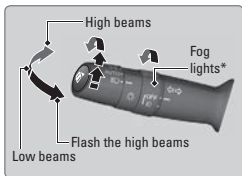

**if equipped*