

Models with Display Audio

Selected temperature display

A/C: Turn air conditioning on or off.

MODE: Select airflow location.

Fan speed: Select a setting.




Temperature control dial

AUTO button: Press to use the temperature control dial to set your preferred temperature.

CLIMATE button: Select climate options on the touchscreen.

ON/OFF button

Fan control dial

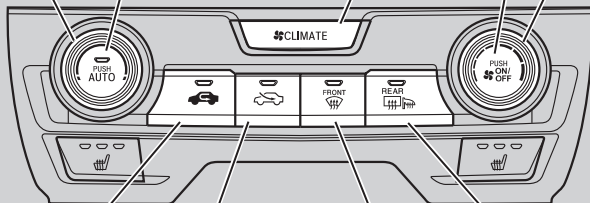

Recirculation button:

Recirculates air from the vehicle's interior.

Fresh air button:

Maintains outside ventilation.

Windshield defroster button

Rear defogger/ heated door mirrors button

Models with Display Audio and SYNC button

Selected temperature display

A/C: Turn air conditioning on or off.

MODE: Select airflow location.

Fan speed: Select a setting.




Driver's temperature control dial

AUTO button: Press to use the temperature control dial to set your preferred temperature.

CLIMATE button: Select climate options on the touchscreen.

SYNC button: Set the passenger's side temperature to the same as the driver's side.

Passenger's temperature control dial

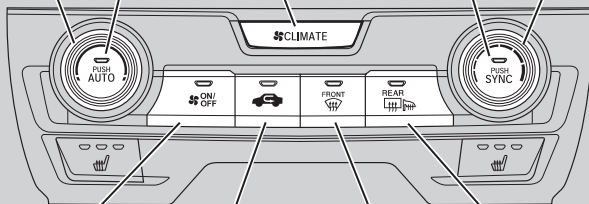

ON/OFF button

Recirculation button: *Recirculation mode (indicator on):* Recirculates air from the vehicle's interior. *Fresh air mode (indicator off):* Maintains outside ventilation.

Windshield defroster button

Rear defogger/heated door mirrors button