


Customized Features*

Use the Settings menu to customize certain features when the vehicle is stopped.

Models with color audio system

Use the selector knob to make and enter selections.

1. Press the MENU/CLOCK button.
2. Select Settings.
3. Select a setting option, and make your preferred changes.
4. Press the Back button to exit the menus.

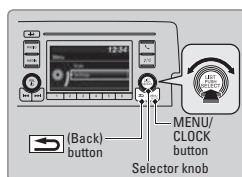

Models with Display Audio

Select items on the touchscreen to make selections.

1. From the HOME screen, select SETTINGS.
2. Select an option (Clock, Info, Camera, Bluetooth/Wi-Fi, Smartphone, Phone, Audio, System, Vehicle, or Navigation*).
3. Select a setting option and make your preferred changes.
4. Press BACK to exit the menus.



■ Customization Example: Door Lock Settings

For models with color audio. For Display Audio, follow the steps below. The vehicle must be stopped and the power mode ON.

Auto Door Lock Choices	Auto Door Unlock Choices
With Vehicle Speed	All Doors When Driver's Door Opens
Shift from Park	All Doors When Shifted to Park
Off	All Doors When Ignition Switched Off
	Off

1. From the home screen, press Settings.
2. Press Vehicle.
3. Press Door/Window Setup:
 - To customize door lock settings, press Auto Door Lock.
 - To customize door unlock settings, press Auto Door Unlock.
4. Choose a setting:
 - The default lock setting is With Vehicle Speed.
 - The default unlock setting is All Doors when Driver's Door Opens.
5. Press BACK when you are done.

**if equipped*


Setting the Clock

Adjust the time using the steps described for your vehicle type.

Models with color audio system

Use the selector knob to make and enter selections.

1. Press and hold the MENU/CLOCK button.
2. Select the hour and adjust as necessary.
3. Select the minutes and adjust as necessary.
4. Select Set when complete.

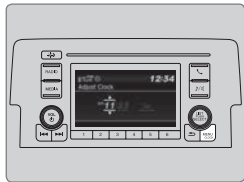

Models with Display Audio

Touch items to make selections. On vehicles with navigation, the time is automatically set using GPS signals.


1. From the HOME screen, select Settings.
2. Select Clock.
3. Select Clock Adjustment.
4. Adjust the hour and minute values.
5. Select OK when complete.





■ Customizing Door Lock Settings

Customize the auto door-lock setting to your preference. Begin with the vehicle off.

Models with information display

Steps	Driver's Door Open Mode ^{*1}	Models with continuously variable transmission Park Unlock Mode	Off
1	Apply the parking brake. Models with continuously variable transmission Move the shift lever out of P.	Apply the parking brake. Move the shift lever to P.	Apply the parking brake. Models with continuously variable transmission Move the shift lever to P.
2	Close the driver's door.		Open the driver's door.
3	Turn the ignition switch to ON.		Turn the ignition switch to ON.
4	Press and hold the left side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear a click twice.		
5	Turn the ignition switch to ACCESSORY within 20 seconds. Customization is completed.		

*1:Default setting

Steps	Drive Lock Mode ^{*1}	Off
1	Apply the parking brake. Models with continuously variable transmission Move the shift lever out of P.	Apply the parking brake. Models with continuously variable transmission Move the shift lever to P.
2	Close the driver's door.	Open the driver's door.
3	Turn the ignition switch to ON.	Turn the ignition switch to ON.
4	Press and hold the right side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear a click twice.	Press and hold the right side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear one click.
		
5	Turn the ignition switch to ACCESSORY within 20 seconds. Customization is completed.	

*1:Default setting

Models with driver information interface

See Customized Features.