 


# VISUAL INDEX

Quickly locate items in the vehicle's interior.

## Steering Wheel and Nearby Controls

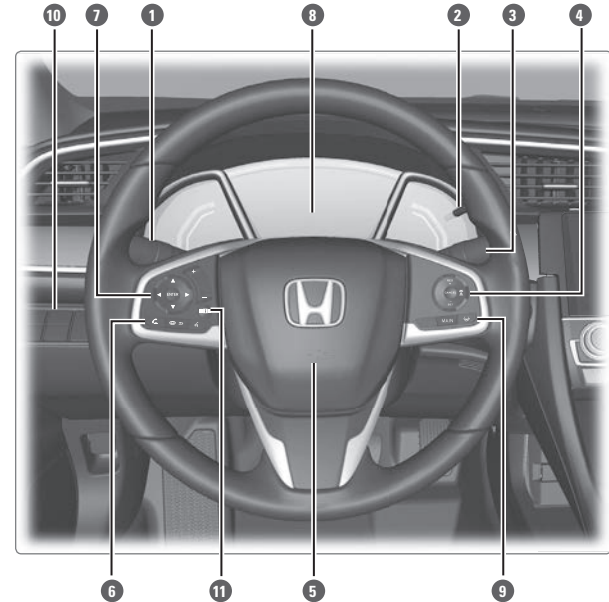

- ① Headlights/fog lights\*/turn signals/  
LaneWatch
- ② TRIP knob  
Brightness control
- ③ Wipers/washers
- ④ Cruise control buttons\*  
Adaptive Cruise Control (ACC) with  
Low Speed Follow (LSF) buttons\*
- ⑤ Horn
- ⑥ Voice recognition/*Bluetooth*  
HandsFreeLink buttons
- ⑦ Audio controls
- ⑧ Instrument panel  
Information display\*  
Driver Information Interface\*
- ⑨ Lane Keeping Assist System (LKAS)  
button\*
- ⑩ Vehicle Stability Assist (VSA) OFF  
button  
Road Departure Mitigation (RDM)  
button\*  
Collision Mitigation Braking System  
(CMBS) OFF button\*  
Tire Pressure Monitoring System  
(TPMS) button\*
- ⑪ Display/information button\*

*\*if equipped*

**Stopwatch\***

 
Measure and show lap times.

- Press ENTER to show the lap time display.
- Press ENTER to start or stop the measurement.
- Press ▲ or ▼ to record a lap time split.
- Press the Back button to show the recorded times.



**Vehicle Settings\***

Use the Driver Information Interface to customize certain features. Use the steering wheel controls to select the Vehicle Settings screen when the vehicle is stopped.

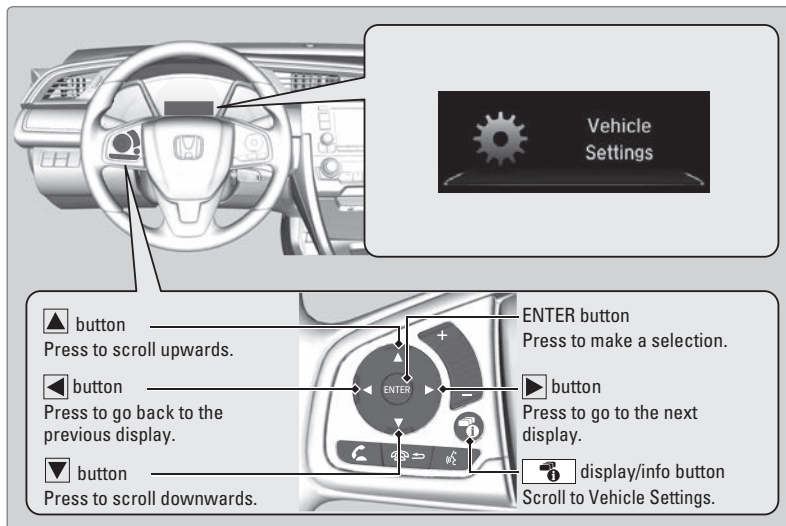

Below is an example of how to change a setting.

1. Press the display/info button until you see the Vehicle Settings screen. Press the ENTER button to select it.
2. Press the ▲ or ▼ button to scroll to Meter Setup, and select it.
3. Scroll to "Trip A" Reset Timing, and select it.
4. Scroll to the option you want, and select it.
5. Scroll to the Exit option, and select it. Repeat to exit the menus.



*\*if equipped*

**NOTICE**

- Do not spill liquids on the charger and device.
- Do not use oil, grease, alcohol, benzene, or thinner for cleaning the charge pad.
- Do not cover the system with towels, clothing, or other objects while charging etc.
- Avoid using spraying hair spray, insecticides, etc, that may contact the charge pad surface.
- Do not place any magnetic devices, credit cards, or watches within the charge area while charging. The data on credit cards can be lost, and watches may stop working.

**Steering Wheel Controls**

You can operate certain functions of the audio system using the steering wheel controls.

**Models with information display**

**SOURCE button:** Cycle through available audio modes.

**+ / - buttons:** Adjust audio volume.

**◀ / ▶ buttons:** Change presets, tracks, albums, or folders.

**FM/AM Radio**

Press **◀** or **▶** for the next or previous preset station.

Press and hold **◀** or **▶** to seek the next or previous strong station.

**iPod/USB/Bluetooth Audio**

Press **◀** or **▶** for the next or previous track.

Press and hold **◀** or **▶** for the next or previous folder (USB).

**Models with Driver Information Interface**

**INFO button:** Press until the audio screen is displayed in the Driver Information Interface.

**+ / - bar:** Press the ends of the bar to adjust audio volume.

**◀ / ▶ buttons:** Change presets, tracks, albums, or folders.



**ENTER button:** Make audio selections in the Driver Information Interface.

**FM/AM/SiriusXM Radio\***

Press **◀** or **▶** for the next or previous preset station.

Press and hold **◀** or **▶** to seek the next or previous strong station.

**iPod/USB/Bluetooth Audio**

Press **◀** or **▶** for the next or previous track.

Press and hold **◀** or **▶** for the next or previous folder (USB).

**Pandora\***

Press **▶** for the next song.

Press and hold **◀** or **▶** for the previous or next station.

**▲ / ▼ buttons:** Cycle through available audio modes, or scroll through audio options in the Driver Information Interface

From the audio screen in the Driver Information Interface:

**FM/AM/SiriusXM Radio\***

Press the ENTER button to display a preset list. Press **▲** or **▼** to scroll the list, and press the ENTER button to select a preset.

**USB Flash Drive**

Press the ENTER button to display the folder list. Press **▲** or **▼** to scroll the list, and press the ENTER button to select a folder. Repeat to select a track.

**iPod**

Press the ENTER button to display the iPod list. Press **▲** or **▼** to scroll the category, and press the ENTER button to select an item. Repeat to select a track.

**Bluetooth Audio**

Press the ENTER button to display the track list. Press **▲** or **▼** to scroll the list, and press the ENTER button to select a track.

**Pandora\***

Press the ENTER button to display the station list. Press **▲** or **▼** to scroll the list, and press the ENTER button to select a station.

*\*if equipped*

*\*if equipped*

## Models with Display Audio

### Basic HFL Operation

Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit [handsfreelink.com](http://handsfreelink.com) (U.S.) or [handsfreelink.ca](http://handsfreelink.ca) (Canada) to check phone compatibility.

**To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function. Voice commands are also available.**

#### ■ HFL Controls

Use the controls to enter information and make selections.

**Hang-Up/Back button:** End or decline a call, or cancel an operation.

 
 
 
**Pick-Up button:** Answer an incoming call.

**Talk button:** Make a call using a stored voice tag, or say voice commands\*.

**Info button:** Press until the phone screen is displayed in the Driver Information Interface.

**▲ / ▼ buttons:** Scroll the phone list in the Driver Information Interface.

**ENTER button:** From the phone screen in the Driver Information Interface, select from Speed Dial, Call History, or Phonebook.

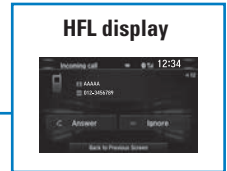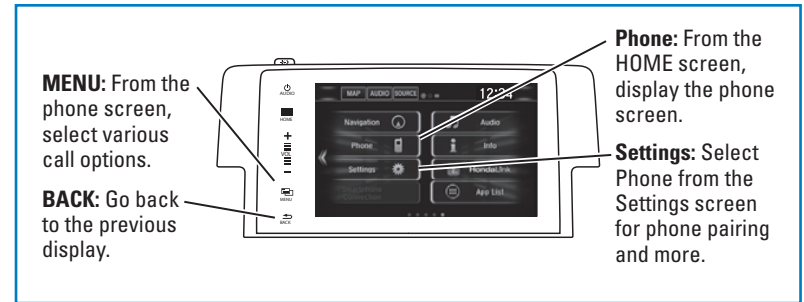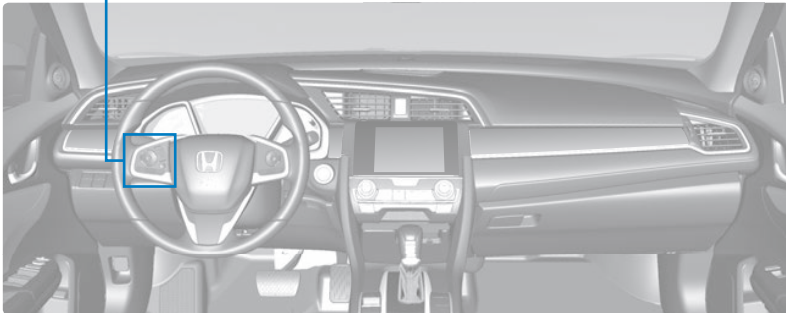

#### ■ Talk Button Tips

For a list of available phone commands, see page 155. The system recognizes only those commands.

- When using the Talk button, wait until you hear a beep before speaking.
- To bypass the system prompts, simply press the Talk button again to say your command.\*
- When the Talk button is pressed, all available voice commands are highlighted in yellow.\*
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard vents away from the microphone on the ceiling.
- Close the windows and moonroof.

 
\*vehicles with navigation

\*vehicles with navigation

## Models with Display Audio

## Siri® Eyes Free

Activate Siri through your vehicle when an iPhone is paired to the system. Visit [handsfreelink.com](http://handsfreelink.com) (U.S.) or [handsfreelink.ca](http://handsfreelink.ca) (Canada) to check phone compatibility.

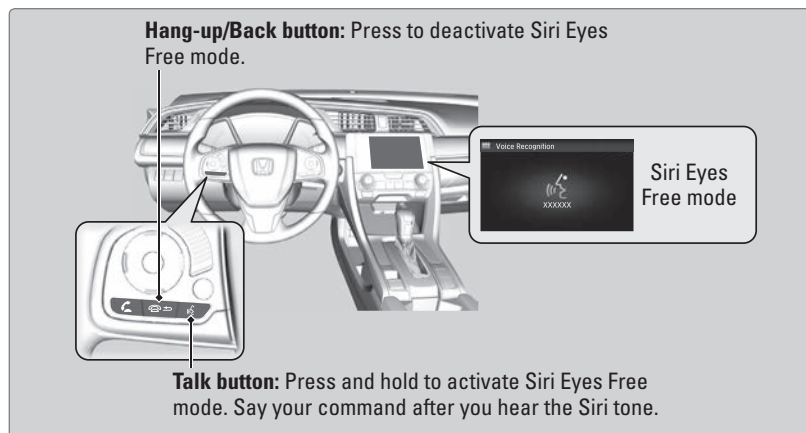

Here are some examples of Siri commands:

*"Call John Smith"*

*"Read my new text message"*

*"Find a nearby sushi restaurant"*

*"Remind me to pick up dinner"*

*"Set up a meeting today at 3 p.m."*

*"Play song XYZ"*

**Notes:**

- Any requests that include visual feedback from Siri on your phone are not displayed in the vehicle.
- Certain commands rely on the iPhone's features and existing apps.
- To hear turn-by-turn directions or songs through the vehicle, set the audio source to *Bluetooth Audio*.
- If using Siri Eyes Free through Apple CarPlay (see page 67), use the Talk button to activate and deactivate Siri Eyes Free mode.

*Siri and iPhone are trademarks of Apple, Inc.*

## NAVIGATION\*

Learn how to enter a destination and operate the navigation system.

 
## Basic Navigation Operation

A real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination. You can operate the system using voice commands or the system controls.

**To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.**

## ■ Steering Wheel Controls

Use the steering wheel controls to say voice commands.

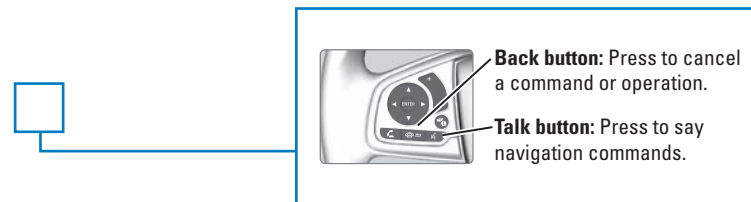

## ■ Talk Button Tips

- When using the Talk button, wait for a beep before saying a command.
- To bypass the system prompts, simply press the Talk button again to say your command.
- Speak in a clear, natural voice.
- The system recognizes only those commands in the Voice Command Index (see page 155).
- Reduce all background noise.
- Adjust the dashboard vents away from the microphone in the ceiling.
- Close the windows and moonroof.

## ■ System Guidance Volume

Adjust the navigation system volume.

1. From the HOME screen, select Settings.
2. Select System.
3. Select the Sound/Beep tab.
4. Select Guidance Volume, and adjust the level. Select OK when complete.
5. Press BACK to exit the menus.



 
*\*if equipped*

## Eco Assist™ System\*

Can help improve fuel economy by adjusting the performance of the engine, transmission, climate control system, and cruise control.

### ■ ECON Button

Press the ECON button behind the shift lever to turn the system on or off. The ECON Mode indicator appears when the system is turned on.

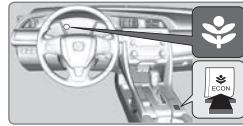


### ■ Ambient Meter

Color-coded bars change based on your driving style and brake or accelerator pedal operation.

**Green:** Fuel-efficient driving

**Light green:** Moderate acceleration/deceleration

 **White:** Spirited acceleration/deceleration

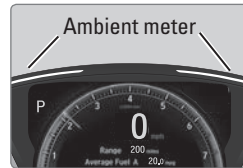

## Vehicle Stability Assist® (VSA®)

 
Also known as Electronic Stability Control (ESC), VSA helps to stabilize the vehicle during cornering if the vehicle turns more or less than what was intended. It assists in maintaining traction on slippery surfaces by regulating engine output and selectively applying the brakes.

### ■ Turning VSA On or Off

VSA is turned on every time you start the engine, even if you previously turned it off. If you turn VSA off, your vehicle has normal braking and cornering ability, but traction control will be less effective.

Press and hold the VSA OFF button until you hear a beep to turn VSA on or off. The VSA OFF indicator appears when the system is off.


When VSA is off, traction control stops functioning, which may make it easier when trying to free your vehicle if it is stuck in mud or snow.

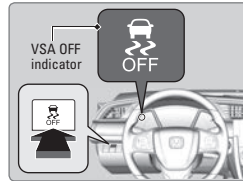

\*if equipped


## Cruise Control\*

 Maintain a constant vehicle speed without having to keep your foot on the accelerator pedal. Use cruise control on highways or open roads where you can travel at a constant speed with little acceleration or deceleration.

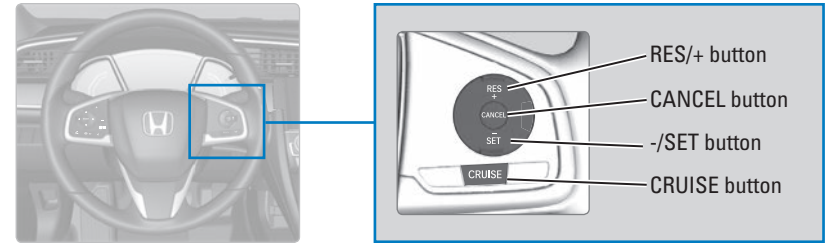

### ■ Activating and Setting the Vehicle Speed

 
1. Press the CRUISE button. The CRUISE MAIN indicator appears.
2. Accelerate to the desired speed (above 25 mph/40 km/h). Take your foot off the pedal and press the -/SET button to set the speed. The CRUISE CONTROL indicator appears.

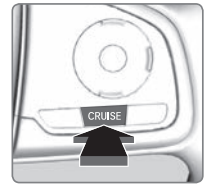

### ■ Adjusting the Vehicle Speed

Press the RES/+ button to increase speed, or the -/SET button to decrease speed.

 Each time you press the button, the vehicle speed is increased or decreased by about 1 mph (1.6 km/h). If you keep the button pressed, the vehicle speed increases or decreases until you release it.

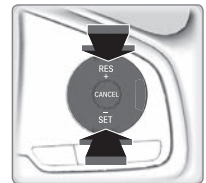


### ■ Canceling Cruise Control

Press the CANCEL button or the brake pedal. The CRUISE CONTROL indicator goes off.

After cruise control has been canceled, you can still resume the prior set speed by pressing RES/+ while driving at a speed of at least 25 mph (40 km/h).

 Press the CRUISE button to turn the system off.

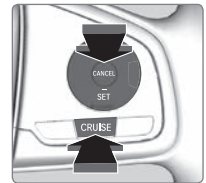

## ⚠ WARNING

Improper use of cruise control can lead to a crash.

Use cruise control only when traveling on open highways in good weather.

\*if equipped