

Interior and Exterior Lights

Operate interior and exterior lights when the power mode is on or off.

■ Exterior Lights

Rotate the switch on the headlight lever to operate the exterior lights.

OFF: All exterior lights are off.

☞☞: Turn on exterior lights except headlights.

AUTO: Turn on the automatic lighting feature. Headlights turn on or off depending on ambient brightness when the power mode is on. Headlights automatically come on after the wipers are engaged for a certain time.

☞☞☞: Turn on all exterior lights including headlights.

