



## Climate Control System

Maintains your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed. Use the buttons on the dashboard to control the system.

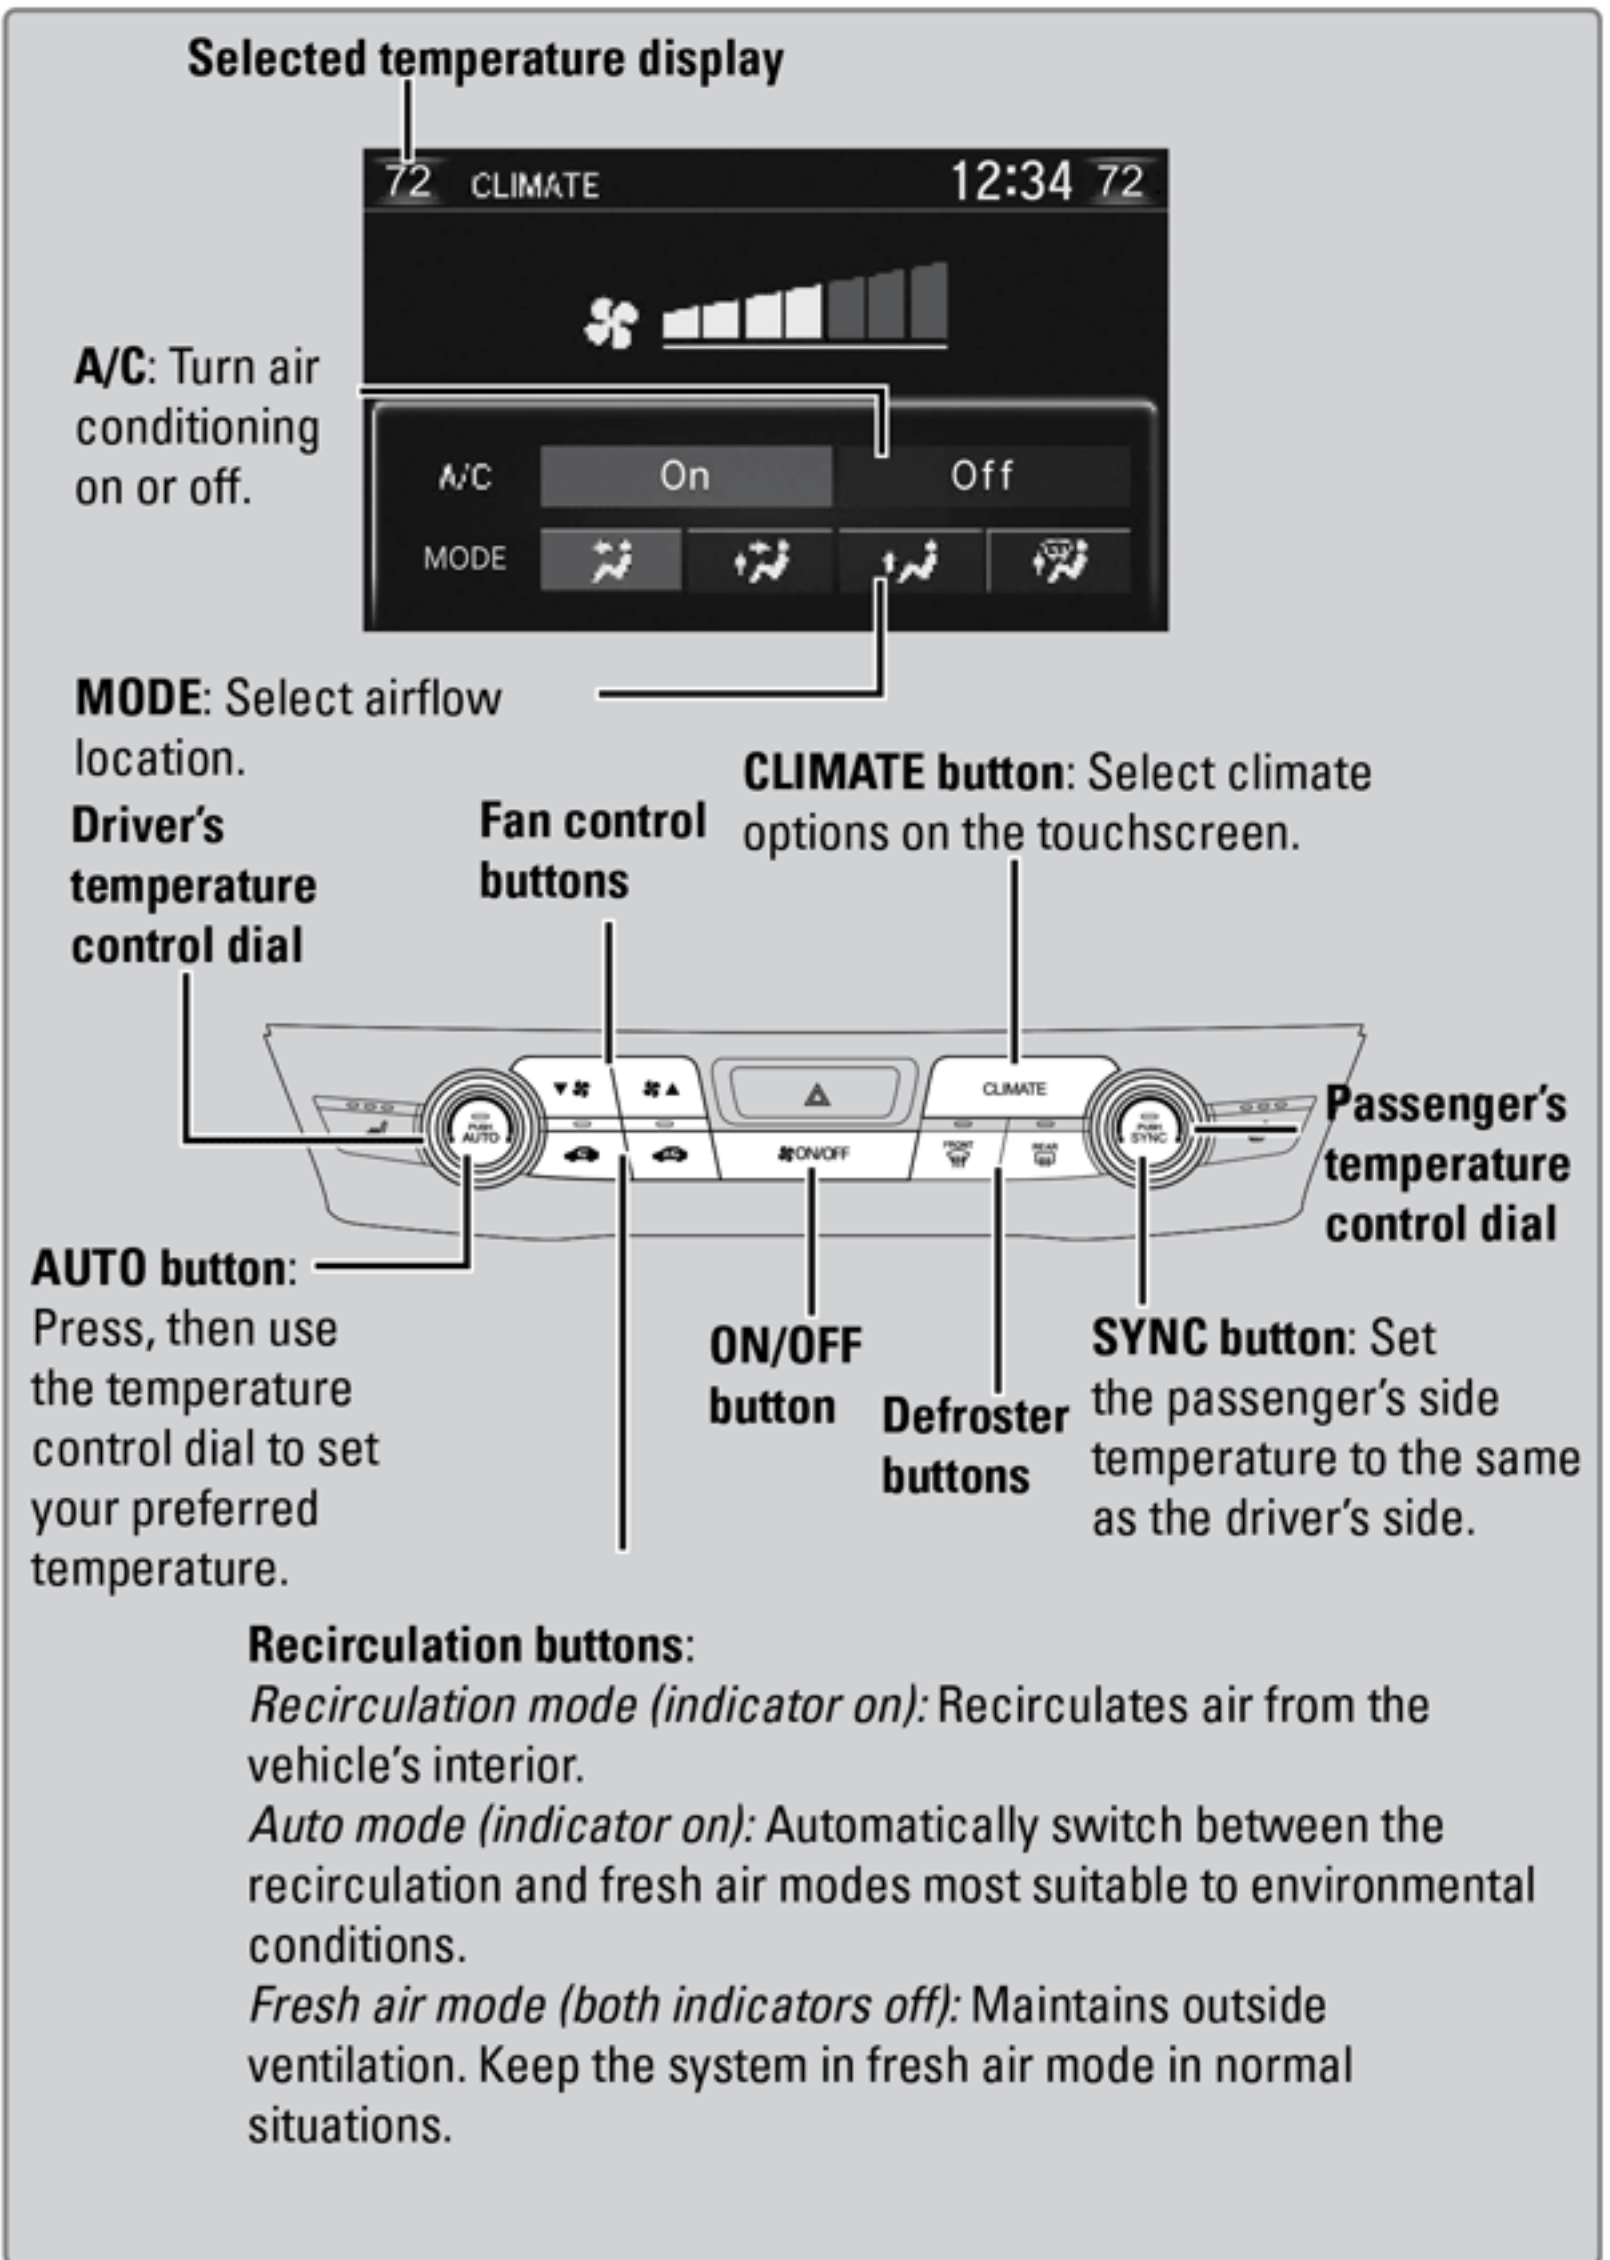

## Remote Climate Control

Start the climate control system using the remote transmitter before you enter the vehicle.

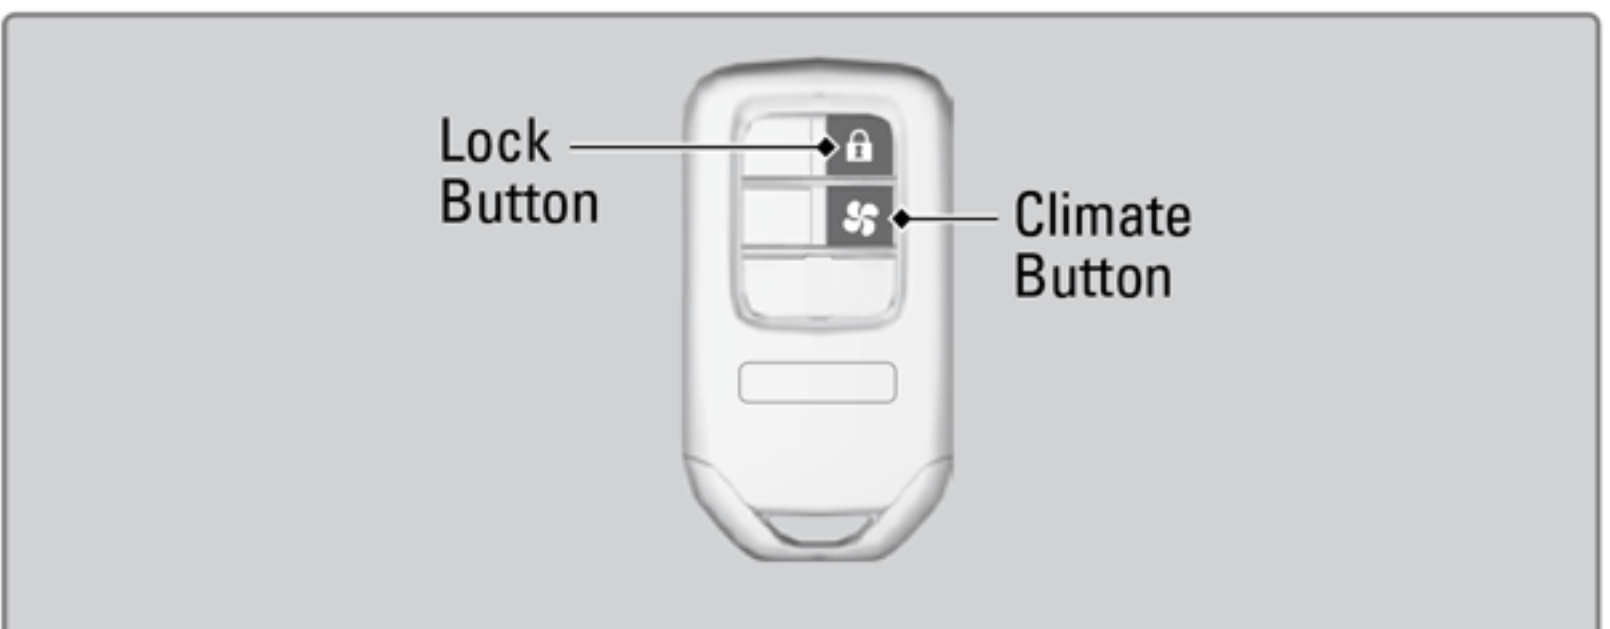

### ■ Turn On the Climate Control System

Press the Lock button, then press and hold the climate button within 5 seconds.

### ■ Turn Off the Climate Control System

Press and hold the climate button.