

INSTRUMENT PANEL

Learn about the indicators, gauges, and displays related to driving the vehicle.



Indicators briefly appear with each power system start and then go out. Red and amber indicators are most critical. Blue and green indicators are used for general information.

Malfunction Indicators

These are the most critical indicators. If they come on and stay lit while driving or at any other time, there may be a problem. See your authorized Honda Clarity Electric dealer if necessary.

- BRAKE Brake system**
 - Brake fluid is low.
 - There is a malfunction in the brake system.

Press the brake pedal lightly to check pedal pressure. If normal, check the brake fluid level when you stop. If abnormal, take immediate action. Have your vehicle repaired immediately.
- Charging system**

The 12-volt battery is not charging. Turn off all electrical items, but do not turn off the vehicle to prevent further battery discharge. Have your vehicle repaired immediately.
- Supplemental Restraint System (SRS)**

There is a problem with one of the airbag systems or seat belt tensioners.
- ABS Anti-lock Brake System (ABS)**

There is a problem with the anti-lock brake system. Your vehicle still has normal braking ability, but no anti-lock function.
- TPMS Tire Pressure Monitoring System (TPMS)**

(Blinks and stays on) There is a problem with the tire pressure monitoring system or a tire has low pressure.
- CMBS Collision Mitigation Braking System (CMBS)**

There is a problem with the system, the temperature is too high, or the camera is blocked.
- VSA Vehicle Stability Assist (VSA)**

There is a problem with the VSA system.
- Brake system**

There is a problem with the brake system, not related to the conventional brake system.
- EPS Electric Power Steering (EPS)**

There is a problem with the EPS system.
- ACC Adaptive Cruise Control (ACC) with Low Speed Follow (LSF)**

There is a problem with the system, the temperature is too high, or the radar sensor is blocked.
- LKAS Lane Keeping Assist System (LKAS)**

There is a problem with the system.
- RDM Road Departure Mitigation (RDM)**

There is a problem with the system.
- Transmission Malfunction Indicator**

The indicated current gear selection or all the gear positions blink if there is a problem with the transmission system.
- Immobilizer**

Your key or remote transmitter cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the power system. Turn the vehicle off, and then on again. If it continues to blink, there may be a problem with the system. See your dealer.
- Keyless Access system**

There is a problem with the keyless access system.

Condition Indicators

These indicators may require you to perform an action.

- BRAKE Parking brake**

The brake fluid is low, the parking brake is applied, or there is a problem with the brake system.
- Seat belt reminder**

Make sure seat belts are fastened for you and all passengers. The indicator blinks and beeps sound continuously if you or your front passenger has not fastened your seat belts when you begin driving. If the indicator remains on after seat belts are fastened, see your dealer.
- Low charge**

Recharge as soon as possible. Acceleration capability reduced to conserve power.
- Low tire pressure**

Stop in a safe place, check tire pressures, and inflate tire(s) if necessary. Have your tire repaired or replaced as soon as possible.
- System message**

When a condition or malfunction indicator comes on, a message also appears on the driver information interface. Check the display for more information.
- READY**

The vehicle is ready to drive.
- POWER SYSTEM Power System**

There is a problem with the power system or plug-in charging system. Have your vehicle checked by an authorized Honda Clarity Electric dealer immediately.
- Door/trunk open**

Close any open doors or the trunk. A beep sounds if any doors or the trunk is opened while driving.

On/Off Indicators

These indicators remind you when an item is on or off.

- VSA off**
- VSA engaged (blinks)**
- CMBS off**
- Turn signals/hazards on**
- High beams on**
- Exterior lights on**
- SPORT SPORT mode on**
- ECON mode on**
- LKAS LKAS on**
- ACC ACC on**
- Brake hold system on**
- Brake hold system activated**

Driver Information Interface (DII)

Consists of several displays that provide you with useful information.


Press the Display/Information button

see the current display.




Main Displays

Press ◀ or ▶ button to cycle through the displays shown below. Press ENTER to see detailed information.

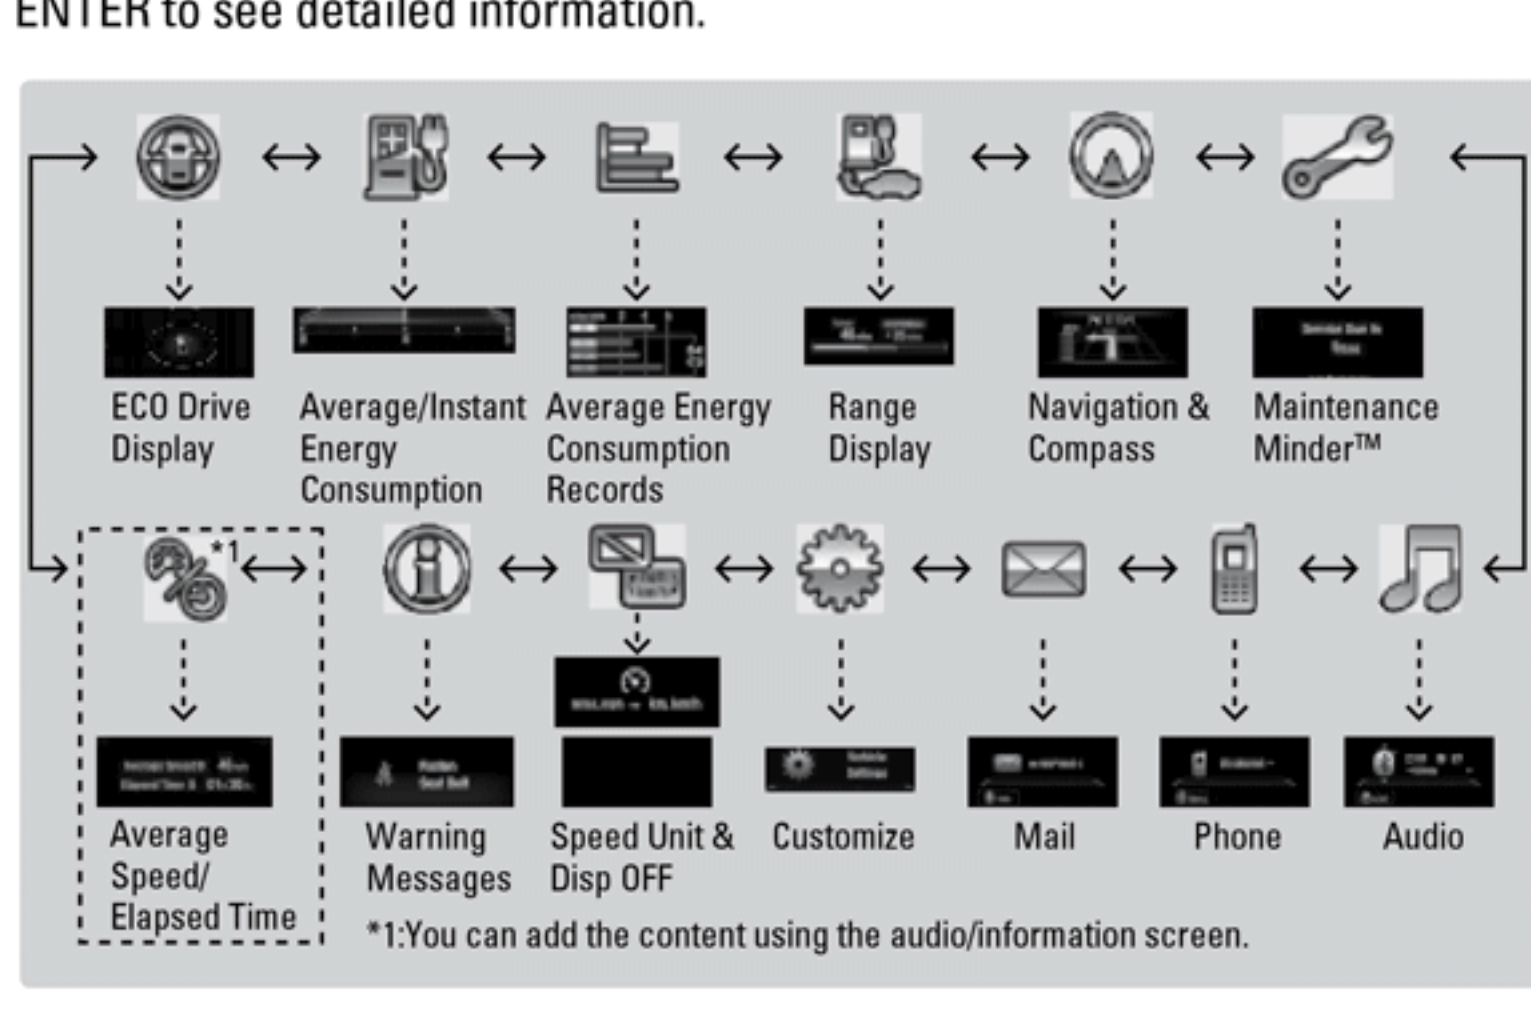

Lower Displays


Press the TRIP button to cycle through the displays shown below:

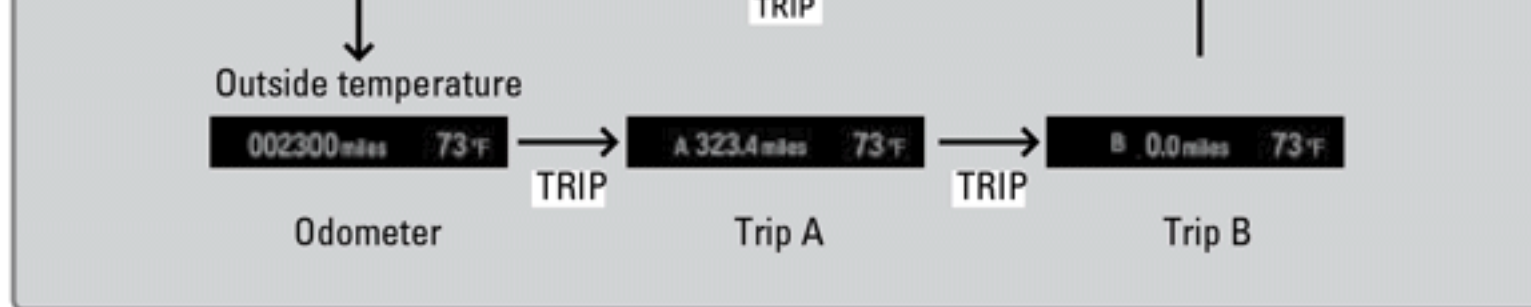

Head-Up Display

To turn the head-up display on and off: Press the HUD button. You can adjust the display up and down to match your eye level.

To raise or lower the head-up display: Press and hold the (▲/▼) button until the desired position is reached.

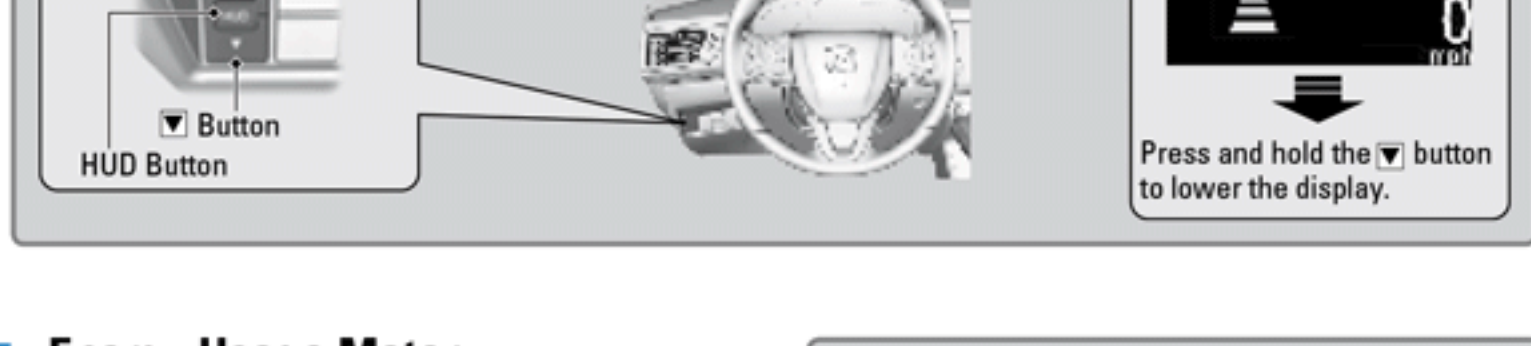

Energy Usage Meter

Shows the amount of energy being consumed by the drive system and the climate system.

