Adjusting the Sound

- and enter selections.
- Audio. 3. Select Menu.
- 6. Select OK when complete.
- **Touchscreen Operation**




certain audio functions.

distraction. You can select them when the vehicle is stopped or use voice commands.

You can use a microfiber cleaning cloth to remove dust or fingerprints from the touchscreen.

to the previous current audio screen. **HOME** (shown) information.

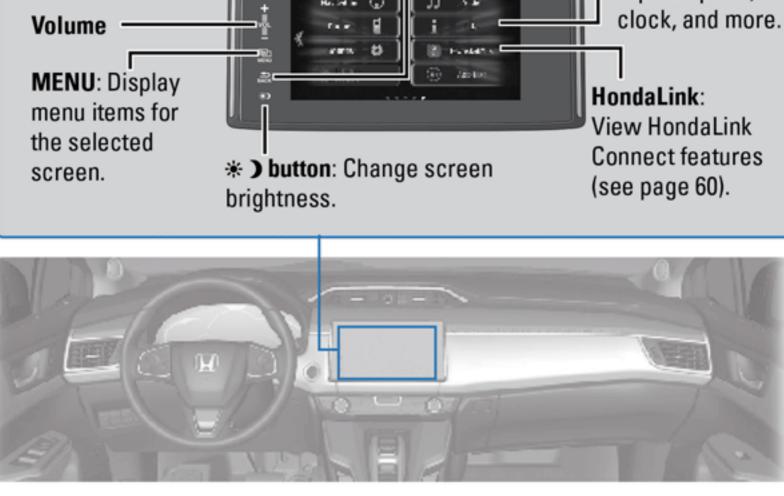



services through the touchscreen. If your compatible phone has hotspot capabilities, the system can be tethered to the phone. Follow the steps below to

- set up Wi-Fi when the vehicle is stopped. Standard data rates apply with your phone service provider.
- From the HOME screen, select Bluetooth / Wi-Fi Settings.

3. Select Wi-Fi On/Off Status, and select

to connect does not appear, select

2. Select Bluetooth/Wi-Fi. Select the Wi-Fi tab.

0n.

Scan.

Select Connect.

4. Select Wi-Fi Device List. Make Default OK sure your phone's Wi-Fi setting is in access point (tethering) mode. 12:34 Wi-Fi Device List 5. Select the phone you want to connect AAAAA to the system. If the phone you want

Connect an Apple CarPlay-compatible iPhone to the system. You can use the

touchscreen to make a phone call, listen to music, and more. Visit the Apple

the connection is successful. Apple CarPlay™

CarPlay website for more information.

7. Enter a password for your phone,

if necessary. Select OK. The Wi-Fi

symbol is displayed on the list when

FM/AM Radio Play FM or AM radio stations.

the station.

Connect Delete

Bluetooth

Wi-Fi On/Off Status

Wi-Fi Information

12:34

Off

Open/close: Display

or hide the station

list or preset list.

Seek: Search

for the next or

channels at a time.

Open/close:

the track list.

Display or hide

Song: Change

the track. Press

rapidly within a

iPod is a trademark of Apple, Inc.

Open/close:

the track list.

Track: Change

12:34

Open/close:

the track list.

Display or hide

Track: Change

12:34

the track.

Music Search

Setting

Play/Pause

Skip: Go to the

Applicable laws may prohibit the operation of

handheld electronic devices while operating a vehicle.

Launch streaming audio on your phone only when it is safe to do so.

next song.

Sound

Applicable laws may prohibit the operation of

handheld electronic devices while operating a vehicle.

the track.

Display or hide

and hold to move

Scan: Scan for each station with a

Source:

Select the FM


or AM icon.

previous station with a strong strong signal. signal. Tune: Change Presets:

Select and hold a preset

station. Select a preset

number to store the current

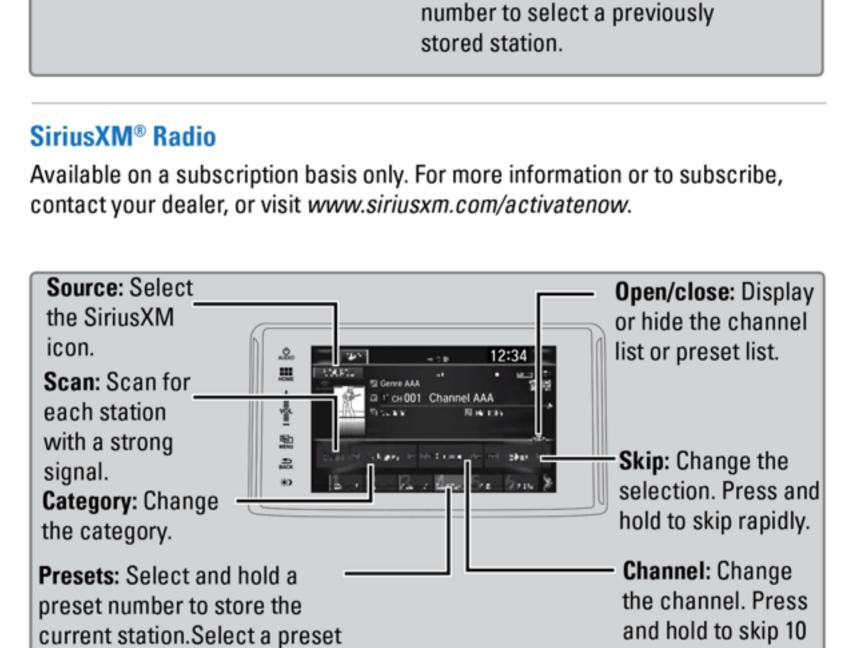

To learn about additional features—such as multi-channel preset, replay, or

SportsFlash—see your Owner's Manual on the Owner Information CD or visit

Play and operate an iPod through the vehicle's audio system. Connect your

Available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico.

₽ı. 12:34

Artists Albums

Songs

Genres **Podcasts**

12:34

Music search

01 Root A

■ 02 Music

Album AAA

Composers

XM® is a registered trademark of Sirius XM Radio, Inc.

track. including Music Search. Searching for Music

13 01 Track AAA

device to the USB port. If an iPhone is connected via Apple CarPlay, the iPod source is unavailable and audio files on the phone can only be played within Apple CarPlay.

Source:

Select the

iPod icon.

Play/

pause

MENU: Display menu options,

Select Music Search.

Select a search option.

4. Select the track you want to play.

5. On vehicles with navigation, you

music using Song By Voice.

Connect your device to the USB port.

急

急

can also search for and play iPod

iPod®

number to select a previously

stored station.

owners.honda.com.

Use the touchscreen to search for tracks stored on the iPod. 1. From the audio screen, press 12:34 Music search MENU.

Source: Select the USB icon.

MENU: Display menu

1. From the audio screen, press

Select Music Search.

USB Flash Drive

Folder:

folder.

Change the

MENU.

Source: Select

MENU: Display -

including Music

Searching for Music

MENU.

Notes:

1. From the audio screen, press

Select Music Search.

Select a search category.

Select the track you want to play.

menu options,

....

+ 10

1

蟲

Play/pause

the Bluetooth

icon.

Search.


options, including Music Search. **Searching for Music**

Use the touchscreen to search for tracks stored on the USB flash drive.

Play and operate a USB flash drive through the vehicle's audio system.

■ 01 Track AAA

Artist AAA

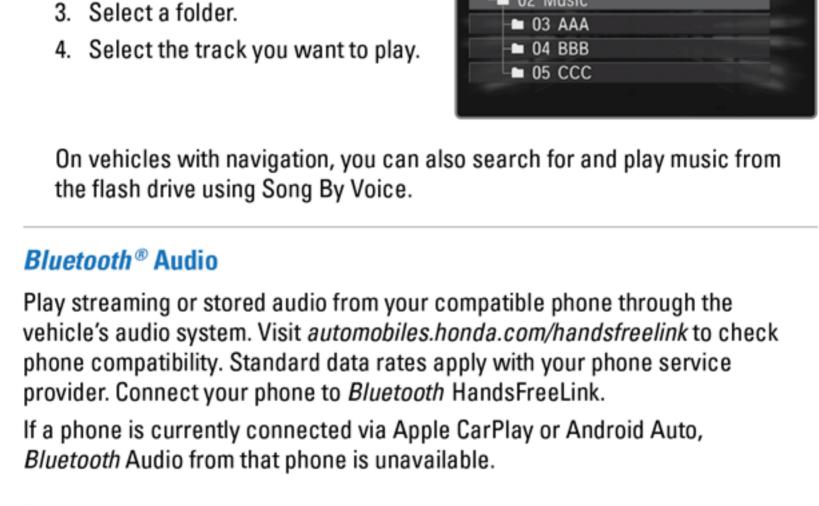

E 01 Track AAA

Use the touchscreen to search for tracks stored on the device.

Make sure the volume on your phone is properly adjusted.

Certain audio controls are not supported on all phones.

You may need to enable additional settings on your phone for playback.

He Track

Group: Change

Audio menu

the group.

Launch streaming audio on your phone only when it is safe to do so. Pandora®

Pandora to be launched.

MENU: Display

menu options,

including the

Station List.

audio system. If Pandora still does not operate, try rebooting the phone and reconnecting the cable if necessary.

For other compatible smartphones: Connect via Bluetooth HandsFreeLink.

Station:

station.

Change the

Connect via Bluetooth HandsFreeLink or USB port.


- **№ 01 Track AAA**
- Play and operate Pandora from your compatible phone through the vehicle's audio system. Visit automobiles.honda.com/handsfreelink to check phone compatibility. Standard data rates apply with your phone service provider. Connect your phone when the vehicle is stopped. For iPhone:

A pop-up may appear on your phone requesting you to allow access for

streaming through Bluetooth Audio. Make sure Pandora is selected on the

If you cannot operate Pandora through the audio system, it may be

- If your phone is connected to Android Auto, Pandora is only available through the Android Auto interface. Visit the Android Auto website to check compatibility.
- Like/dislike Source: Select the Pandora song icon.

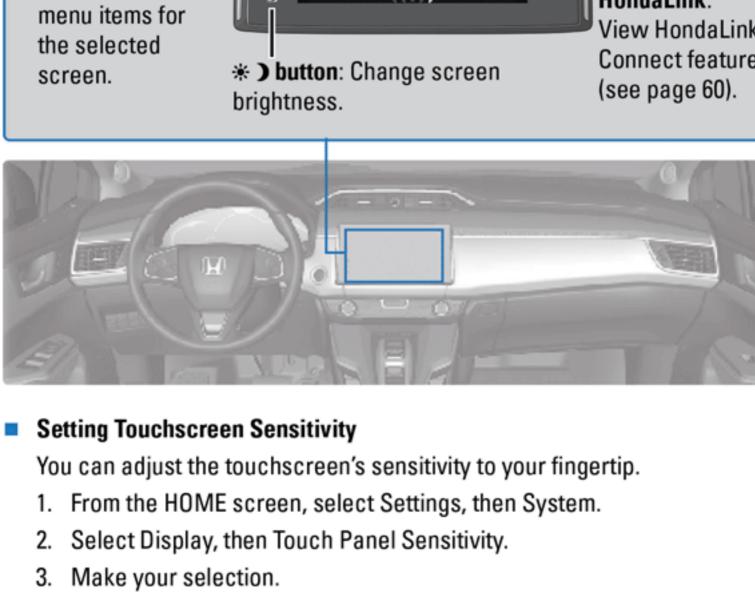

- Wi-Fi Connection You can connect the audio system to the internet using Wi-Fi and use online
- AUDIO: Turn BACK: Go back Audio: Display audio on or off. Info: Display the 12:34 trip computer,
- 5. Select the tabs to change the sound mode and adjust the setting. Use simple gestures—including touching, swiping, and scrolling—to operate Some items may be grayed out during driving to reduce the potential for Wearing gloves may limit or prevent touchscreen response.

- Adjust various sound settings. Using the touchscreen Touch items on the screen to make 2. From the HOME screen, select
- Select Sound.