


## Maintenance Minder™

Reminds you when indicated maintenance service is due.

When maintenance is due, the system message indicator comes on and a message appears on the driver information interface every time you turn the vehicle on. Press either Info button (◀/▶) on the steering wheel to change displays.

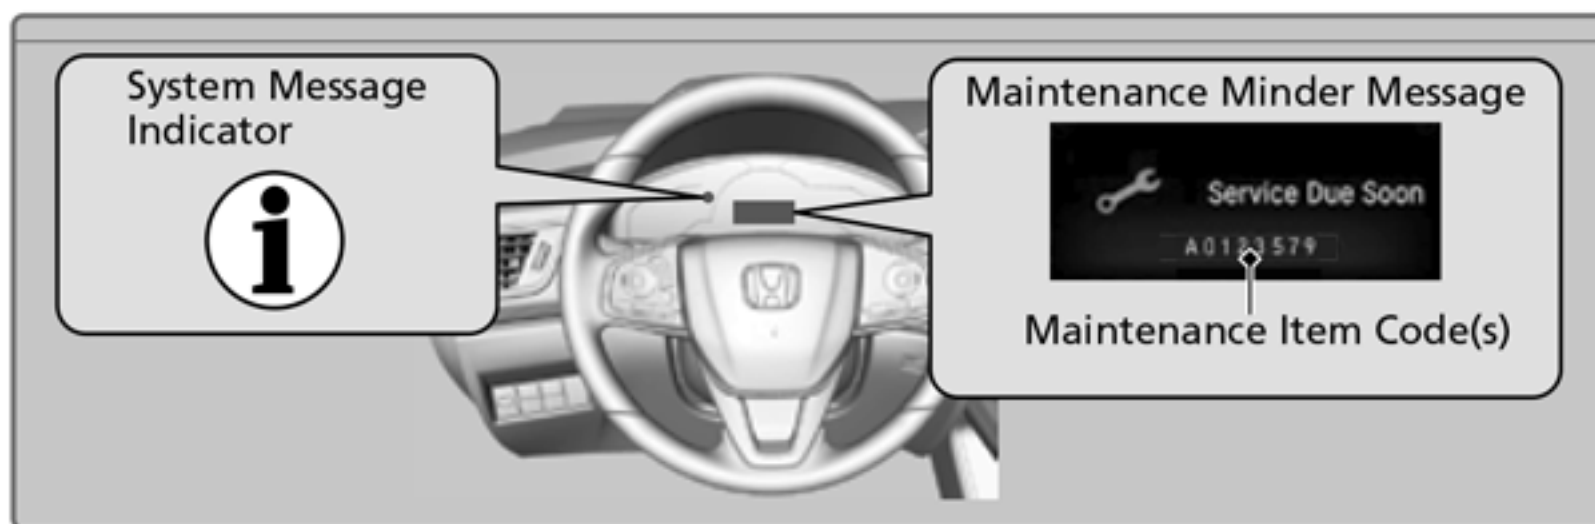

- At each maintenance interval, check the Fuel Cell insulating fluid level. Top up to the Max fill line as needed, using 20% diluted FC insulating fluid.
- Every 15 years, replace the hydrogen tank, ventilation drain, and duct.

**Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.**

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the driver information interface.