


## Rear Seats

Adjust second-row seats, access third-row seats, or remove seats for carrying cargo.


### ■ Adjusting the Second-Row Passenger's Seats

Second-row passenger's seats can be adjusted manually.

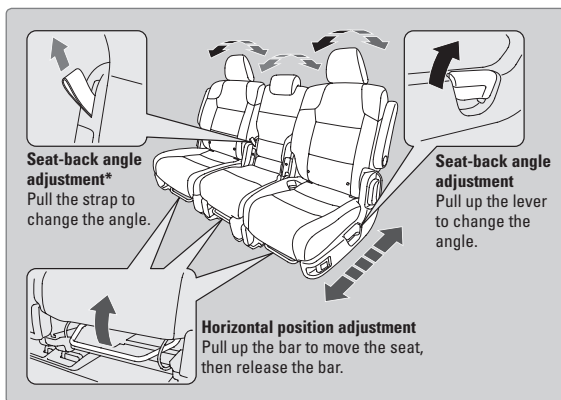


### ■ Adjusting the Third-Row Passenger's Seats

Pull up the right strap to change the angle of the right and center seat-backs, and the left strap for the left seat-back.

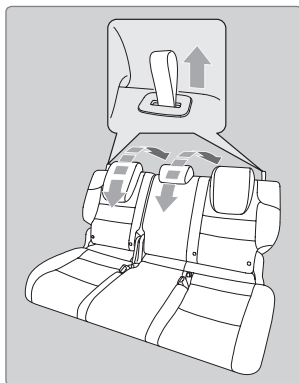

### ■ Third-Row Seat Access

Pull up on the seat-back angle adjustment lever, or pull the release strap to tilt the second-row outer seat forward. Slide the whole seat forward.


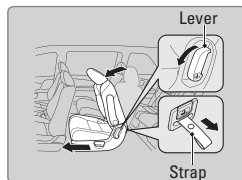


*\*if equipped*

## ■ Sliding the Second-Row Seats Outward

The second-row outer seats can be moved outward slightly to allow two or three child seats to be installed.



1. For the seat you want to move, lower the head restraint to its lowest position.
2. Move the seat to its rearmost position.
3. Fold the seat-back down.
4. Pull the lock release lever, and grab the handle under the rear side of the seat cushion to lift the rear of the seat.
5. With the front of the seat hooked to the floor, slide the seat to the outer position until it stops.
6. Lower the seat and push the rear of the seat-back until it locks into place.

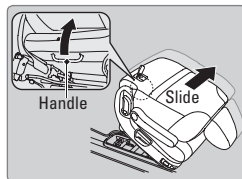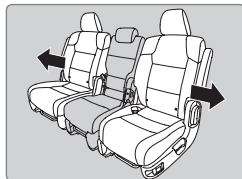

## ■ Removing a Second-Row Outer Seat

An outer second-row seat can be removed to increase storage and cargo space.

1. For the seat you want to remove, lower the head restraint to its lowest position.
2. Move the seat to its rearmost position.
3. Fold the seat-back down.
4. Pull the lock release lever, and grab the handle under the rear side of the seat cushion to lift the rear of the seat.
5. Pull the seat-back slightly, then pivot it upward to unhook the front of the seat from the floor.
6. Remove the seat.

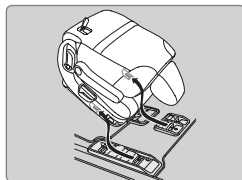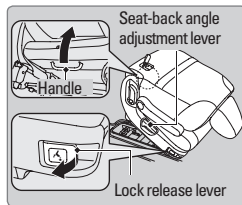


**To reinstall the seat:** First hook the front of the seat to the floor. Then, push the rear of the seat-back until it locks into place.

### ■ Removing the Second-Row Center Seat

The second-row center seat can be removed to increase storage and cargo space or passenger mobility.

1. Release the center seat belt detachable anchor and retract the seat belt into the holder on the ceiling.
2. Pull up the adjustment strap, and fold down the seat-back.
3. Pull the lock release strap under the seat cushion, and hold the seat-back while lifting the rear of the seat.
4. Pull the seat-back slightly, then pivot it upward to unhook the front of the seat from the floor.
5. Remove the seat.



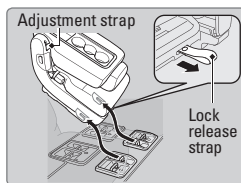


**To reinstall the seat:** First hook the front of the seat to the floor. Then, push the rear of the seat-back until it locks into place.

### ■ Storing the One-Motion Third-Row Magic Seat

You can store the third-row seats to create a flat cargo area.

1. Release the center seat belt detachable anchor and retract the seat belt into the holder on the ceiling.
2. Lower the head restraints to their lowest positions.
3. Pull one or both straps to release the seats to a flat position. Tuck the seats and straps into the cargo area.

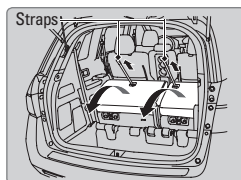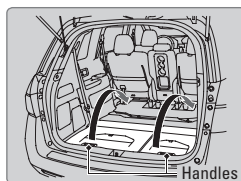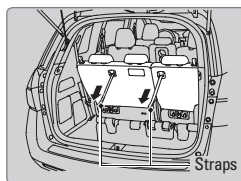

**To reinstall the seats:** Grab the outer handle, pull up the folded seat, and pivot it forward. The front of the seat automatically locks into place. Pull the strap to return the seat-back to its upright position.