


Forward Collision Warning (FCW)*

If the camera mounted between the windshield and the rearview mirror detects a vehicle in front of you when your vehicle speed is 10 mph (15 km/h) or higher—and it determines there is a likelihood of a frontal collision—the system provides you with visual and audible warnings.


If you do not brake in time or take preventive action, BRAKE flashes in the display or the FCW indicator blinks, and a beep sounds continuously.

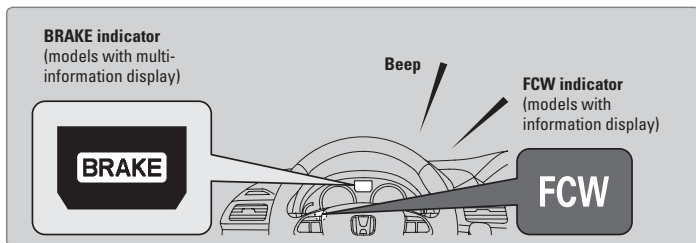

■ Changing Settings

Determine the warning timing, or turn the system off. Use the interface dial to make and enter selections.

1. Press the **SETTINGS** button.
2. Select **Vehicle Settings**. The vehicle must be in **Park (P)**.
3. Select **Driver Assist System Setup**
4. Select **Forward Collision Warning Distance**.
5. Select **Long**, **Normal**, **Short**, or **Off**.
6. Press the **BACK** button to exit the menu.

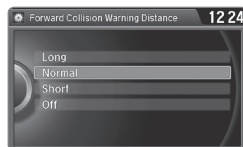

Important Safety Reminder

FCW cannot detect all objects ahead and may not detect a given object; accuracy of the system will vary based on weather, speed, extreme interior heat, and other factors. FCW does not include a braking function. It is always your responsibility to safely operate the vehicle and avoid collisions.