


Cargo Area Lights

Located on the rear ceiling in front of the tailgate.

ON position: Cargo lights remain on.

Door-activated position: Cargo area lights are on when the tailgate is open.

OFF position: Cargo area lights remain off.

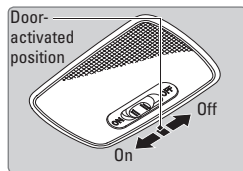

Exterior Lights

Rotate the switches on the headlight lever to operate the exterior lights. Push the lever forward to turn on the high beams. Return the lever to its original position for low beams.


OFF: All exterior lights are off.

☞☞: Turn on exterior lights except headlights.

AUTO: Turn on the automatic lighting feature*. Headlights turn on or off depending on ambient brightness when the vehicle is on. Headlights automatically come on after the wipers are engaged for a certain time.

☞☞☞: Turn on all exterior lights including headlights.

☞☞☞: Turn fog lights* on or off.

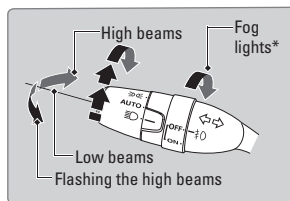


One-Touch Turn Signal

Use this quick and convenient method to signal a lane change.

Lightly push the turn signal lever up or down for a three-blink sequence.

For a continuous signal, push the lever up or down until it locks into place.

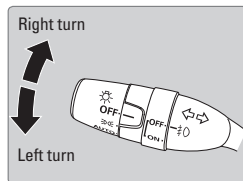

*if equipped