


## Tailgate and Trunk Operation


To drop open the tailgate, pull up in the upper handle. Support the tailgate until it is fully open.

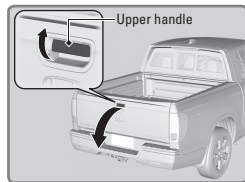


To swing open the tailgate, pull up on the lower handle.




To open the trunk, unlock the doors, then pull up on the trunk release button.

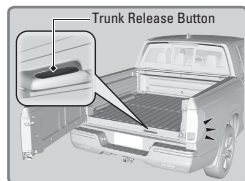

Or, insert the key into the trunk lock cylinder.

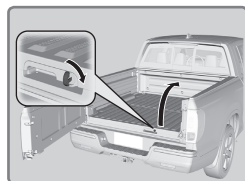

The main switch in the glove box disables the trunk release button.

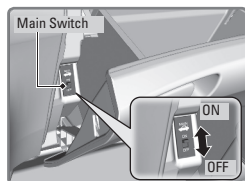

## **WARNING**

Opening or closing a tailgate while anyone is in the path of the tailgate can cause serious injury.

Make sure everyone is clear before opening or closing the tailgate.


## **WARNING**

Allowing passengers to ride in the pickup bed or on the tailgate can result in death or serious injury. Make sure all passengers ride in a seat and wear a seatbelt properly.

## In-Bed Conveniences


### **In-Bed Box**

Turn the knobs to the left to open the lid

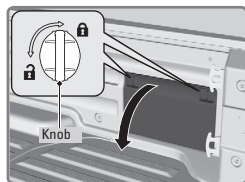


### **AC Power Outlet\***

Open the in-bed box. Open the plug cover, insert a powercord slightly, rotate it 90° clockwise, then push it in all the way.

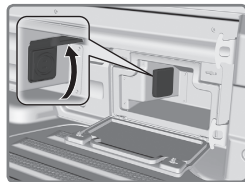

Push the AC power button to turn the system on or off. The maximum power is 400 watts when the engine is running and the vehicle is in Park. Otherwise, the maximum power is 150 watts.

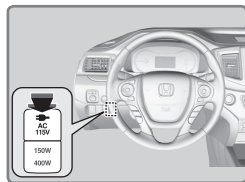

The battery charge may be affected by using AC power with truck bed audio\* or by heavy power outlet use while the vehicle is idling in Park (P). If this happens, engine-idle speed will increase until the battery again has a normal charge.

## **NOTICE**

The AC-power system is not designed for devices needing precise power regulation, nor for devices requiring high initial peak wattage.

*\*if equipped*