


Customized Features

Use the audio/information screen to customize certain features when the vehicle is at a complete stop and the power mode is set to **ON**.

Models with Display Audio

Use the touchscreen audio/information screen to customize certain features when the vehicle at a complete stop and the power mode is set to **ON**.

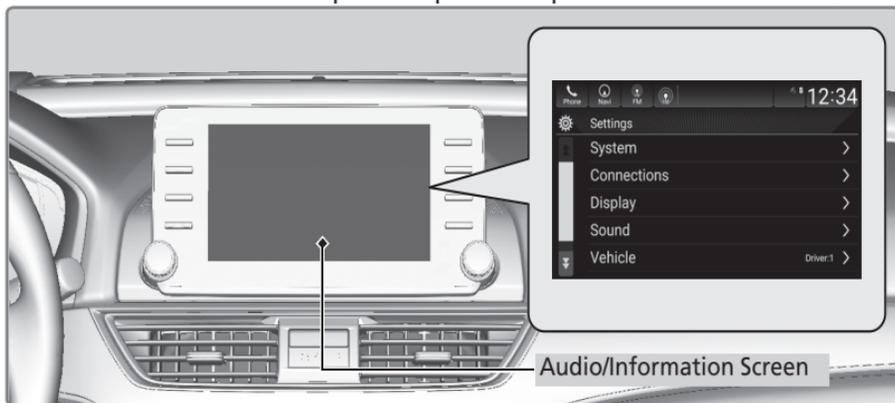

1. Select **Settings**.
2. Select an option and make your preferred changes.
3. Press **HOME** to exit the menu.

■ Customization Example: Door Lock/Unlock Settings

To customize the door lock/unlock settings, the vehicle must be stopped and the power mode set to **ON**.

For **Models with Display Audio**, follow the steps below:

1. Select the **HOME** screen.
2. Select **Settings**.
3. Select **Vehicle**.
4. Select **Door/Window Setup**.
 - To customize door lock settings, select **Auto Door Lock**.
 - To customize door unlock settings, select **Auto Door Unlock**.
6. Choose a setting
 - The default lock setting is **With Vehicle Speed**.
 - The default unlock setting is **All Doors When Driver's Door Opens**.
 - Press the **HOME** button when you are done.

Setting the Clock

Adjust the time using the steps described for your vehicle type. On vehicles with navigation, the time is automatically set using GPS signals.

Models with Display Audio

You can adjust the clock by touching the clock displayed on the upper right corner of the display or the **Clock** icon on the home screen.

1. Touch the clock on the display. The clock screen of the select face-type appears.
2. Select **Settings**.
3. Select **Date & Time**. Then select **Set Date & Time**.
4. Select **Automatic Date & Time**, then select **OFF**.
5. Select **Set Date** or **Set Time**.
6. Adjust the dates, hours, and/or minutes by using the ▲ or ▼ arrows to make selections.
7. Select **Save** to set the time.



Driving Position Memory System*

You can store two driver's seat (except for power lumbar) with the driving position memory system. When you unlock and open the driver's door with smart entry remote, the seat adjusts to retracted positions of one of the two preset positions automatically. The seat will move to the stored position when you set the power mode to **ACCESSORY**.

When you enter the vehicle, the driver information interface briefly shows you which remote transmitter you used to unlock the vehicle.

- **DRIVER 1** transmitter is linked to memory button 1.
- **DRIVER 2** transmitter is linked to memory button 2.



The driver's seat moves rearward depending on the set seating position once you:

- Stop the vehicle.
- Put the transmission in P.
- Set the power mode to **VEHICLE OFF**.
- Then open the driver's door.

Once the power mode is in the **ACCESSORY** position, the driver's seat moves forward to the **DRIVER 1** or **2** preset position.

1. Set the power mode to ON. Adjust the driver's seat to the desired position.


2. Press the **SET** button.

You will hear the beeper and the memory button indicator light will blink.

3. Press memory button **1** or **2** within five seconds of pressing the **SET** button.

Once the seat position has been memorized, you will hear the beeper twice, and the indicator light on the button you pressed stays on.

Press memory button **1** or **2** to recall a stored position.

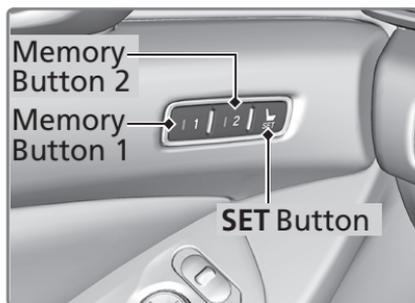

**if equipped*