

## ■ Steering Wheel Controls

You can operate certain functions of the audio system using the steering wheel controls.

### Models with Color Audio

**SOURCE button:** Cycle through available audio modes.

**+ / - buttons:** Adjust audio volume.

**◀ / ▶ buttons:** Change presets, tracks, albums, or folders.



### FM/AM Radio

Press **◀** or **▶** for the next or previous preset station.

Press and hold **t** or **u** to seek the next or previous strong station.

### iPod/USB/Bluetooth Audio

Press **◀** or **▶** for the next or previous track.

Press and hold **◀** or **▶** for the next or previous folder (USB).

### Models with Driver Information Interface

**📶 button:** Press until the audio screen is displayed in the Driver Information Interface.

**+ / - bar:** Press the ends of the bar or slide to adjust audio volume.

**◀ / ▶ buttons:** Change presets, tracks, albums, or folders.



**ENTER button:** Make audio selections in the Driver Information Interface.

### FM/AM/SiriusXM Radio\*

Press **◀** or **▶** for the next or previous preset station.

Press and hold **◀** or **▶** to seek the next or previous strong station.

### iPod/USB/Bluetooth Audio

Press **◀** or **▶** for the next or previous track.

Press and hold **◀** or **▶** for the next or previous folder (USB).

### Pandora\*

Press **▶** for the next song.

Press and hold **◀** or **▶** for the previous or next station.

### ■ **Steering Wheel Controls (continued)**

#### **Models with Display Audio (continued)**

From the audio screen in the Driver Information Interface:

#### **FM/AM/SiriusXM Radio\***

Press the ENTER button to display a preset list. Press ▲ or ▼ to scroll the list and press the ENTER button to select a preset.

#### **USB Flash Drive**

Press the ENTER button to display the folder list. Press ▲ or ▼ to scroll the list and press the ENTER button to select a folder. Repeat to select a track.

#### **iPod**

Press the ENTER button to display the iPod list. Press ▲ or ▼ to scroll the category and press the ENTER button to select an item. Repeat to select a track.

#### **Bluetooth Audio**

Press the ENTER button to display the track list. Press ▲ or ▼ to scroll the list and press the ENTER button to select a track.

#### **Pandora\***

Press the ENTER button to display the station list. Press ▲ or ▼ to scroll the list and press the ENTER button to select a station.

*\*if equipped*