

Seat Heaters*

Quickly warm the seats when the vehicle is on.

■ Front Seat Heaters


Press the seat heater button in the front console to cycle through the heat settings.

Once - The HI setting (three indicators on)

Twice - The MID setting (two indicators on)

Three times - The LO setting (one indicator on)

Four Times - The OFF setting (no indicators on)

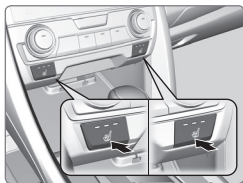

WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

**if equipped*