
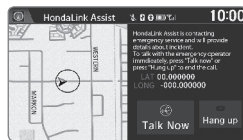


Models with Display Audio

HondaLink® Assist

If your vehicle's airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle automatically attempts to connect to an operator. Your phone must be paired to the system and have good cellular connection. Visit www.hondalink.com (U.S.) or honda.ca/hondalink (Canada) for more information.

1. Make sure your phone is on and paired to Bluetooth HandsFreeLink.
2. Select Call Now, or the system automatically connects after 10 seconds. The vehicle information and its position are sent to the operator.*
3. Select Talk Now to immediately talk to the operator.
4. When the call is complete, select Hang Up or press the Hang-Up/Back button on the steering wheel.

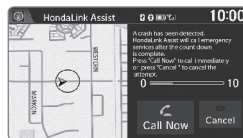

Honda reserves the right to terminate HondaLink Assist services at any time or for any reason, and in the future may not be able to provide services due to changes in or obsolescence of technology integral to the service or changes in governmental regulation.

**Depending on your phone and cellular signal capability, your vehicle's location may not be sent to the operator.*