

Seat Heaters*

Quickly warm the seats when the vehicle is on.

■ Front Seat Heaters


Press the seat heater button in the front console. An indicator appears for the selected setting.

Once: HI setting (three indicators)

Twice: MID setting (two indicators)

Three times: LO setting (one indicator)


Four times: OFF setting (no indicators)

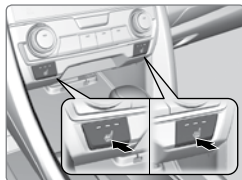

■ Rear Seat Heaters

Press the seat heater button on the back of the center console to heat the two rear outer seats.

Press the LO or HI side of the switch. An indicator appears for the selected setting. Return the switch to the middle position to turn off.

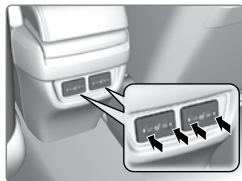

WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

**if equipped*