

Models with Display Audio

SMS Text Messaging and E-Mail*

Certain phone can receive and send messages while paired and connected. Visit automobiles.honda.com/handsfreelink to check phone compatibility. Standard message rates apply with your phone service provider. This feature is limited while the vehicle is moving.


■ Receiving and Responding to Messages

When you receive a new message, a pop-up appears on the touchscreen. You can view the message when the vehicle is stopped. You can also reply to it using fixed phrases or call the sender.

1. When the prompt appears, select Read.
2. The message is displayed, and the system reads it aloud.

To reply: With the message open, select Reply, and choose one of the six available responses. Select Send to send the message. You cannot create a new text message.


To call the sender: With the message open, select Dial.

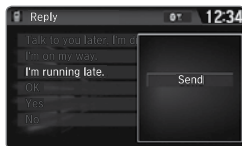

■ Selecting an Account

If your phone has both text message and e-mail accounts, you can select only one of them at a time to be active and receive notifications.

1. From the Home screen, select Settings.
2. Select Phone.
3. Select the Text/Email tab, then Select Account.
4. Select Text Message or an e-mail account.

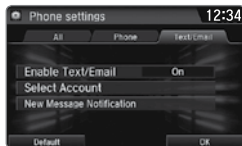

*if equipped