


Models with Display Audio and SYNC button

Selected temperature display

A/C: Turn air conditioning on or off.

MODE: Select airflow location.

Fan speed: Select a setting.

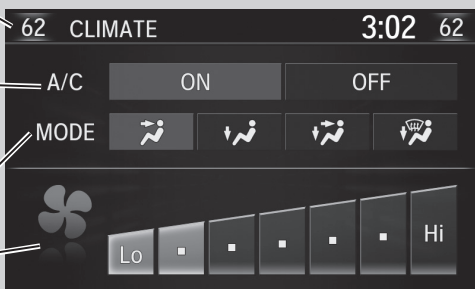


Driver's temperature control dial

AUTO button: Press, then use the temperature control dial to set your preferred temperature.

CLIMATE button: Select climate options on the touchscreen.

SYNC button: Set the passenger's side temperature to the same as the driver's side.

Passenger's temperature control dial

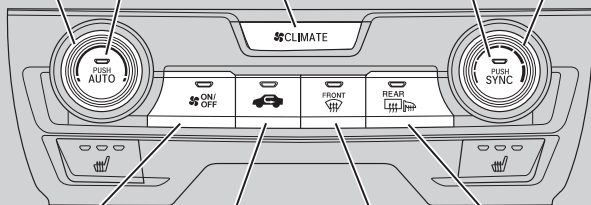

ON/OFF button

Recirculation button:
Recirculation mode (indicator on): Recirculates air from the vehicle's interior.
Fresh air mode (indicator off): Maintains outside ventilation.

Windshield defroster button

Rear defogger/ heated door mirrors* button

*if equipped