

### ■ Walk Away Auto Lock®\*

When you walk away from the vehicle while carrying the remote transmitter, the doors can automatically lock if the following conditions are met:


- The remote transmitter is within a range of 5 feet (1.5 m).
- All doors and the hood are closed.
- There is not an additional remote transmitter inside the vehicle.

Follow these steps (see diagram):

1. Exit the vehicle, close the door and stay near it.  
Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash.  
The doors lock.

To turn on this feature, follow the steps below. The vehicle must be in Park (P).

1. From the HOME screen, select Settings.
2. Select Vehicle.
3. Select Door/Window Setup.
4. Select Walk Away Auto Lock.
5. Select On.
6. Select BACK to exit the menus.

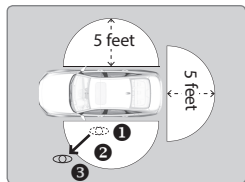

## Customized Features

Use the Settings menu to customize certain features when the vehicle is stopped.

### Models with Display Audio

Select items on the touchscreen to make selections.

1. From the HOME screen, select SETTINGS.
2. Select an option (Clock, Info, Camera, *Bluetooth*<sup>®</sup>/Wifi, Smartphone, Phone, Audio, System, or Vehicle).
3. Select a setting option and make your preferred changes.
4. Press BACK to exit the menus.



### ■ Customization Example: Door Lock Settings

For Display Audio, with the vehicle stopped and the power mode in ON, follow the steps below:

#### Auto Door Lock Choices

With Vehicle Speed

Shift from Park

Off

#### Auto Door Unlock Choices

All Doors When Driver's Door Opens

All Doors When Shifted to Park

All Doors When Ignition Switched Off

Off

1. From the home screen, press Settings.
2. Press Vehicle.
3. Press Door/Window Setup:
  - To customize door lock settings, press Auto Door Lock.
  - To customize door unlock settings, press Auto Door Unlock.
4. Choose a setting:
  - The default lock setting is With Vehicle Speed; CVT models, the default lock setting is Shift from Park (P).
  - The default unlock setting is All Doors when Driver's Door Opens; CVT models, the default unlock setting is All Doors When Shifted to Park (P).
5. Press BACK when you are done.