


Wiper Operation


The windshield wipers and washers can be used when the vehicle is on. Move the wiper lever up or down to the desired position.

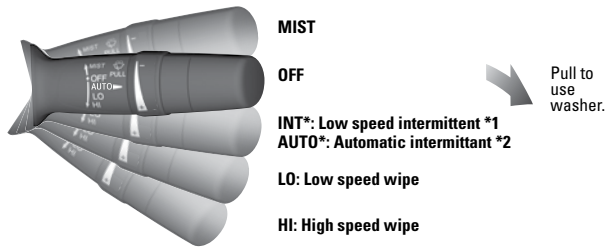

■ Intermittent (INT) Wipers*

When you move the lever to the INT position, the wipers operate based on the delay adjustment.

Rotate the adjustment ring to adjust the wiper delay.

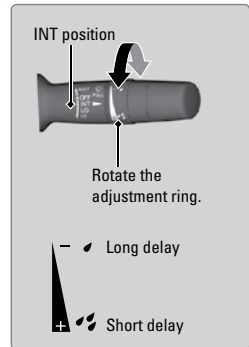

** if equipped*

**1: models without automatic intermittent wipers; *2: models with automatic intermittent wipers*