


## Heating and Cooling System\*

Manually control the front heating and cooling in your vehicle's interior using the buttons and dials on the dashboard.

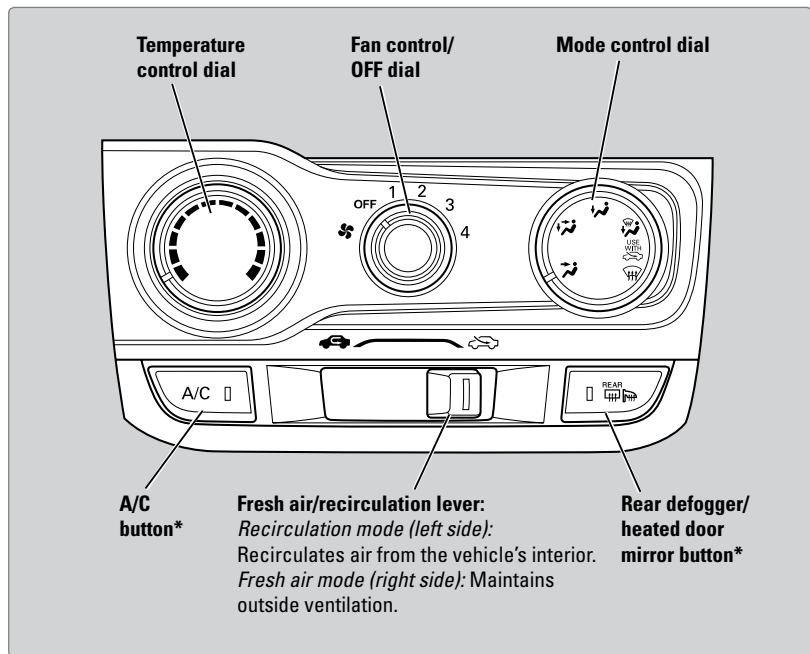


Follow these steps for maximum cooling.

1. Set the fan to maximum speed.
2. Set the temperature to maximum cool.
3. Select recirculation.
4. Press the A/C button (indicator on).

*\*if equipped*

## Climate Control System\*

The automatic climate control system can maintain your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed. Touch the icons on the dashboard to control the system.

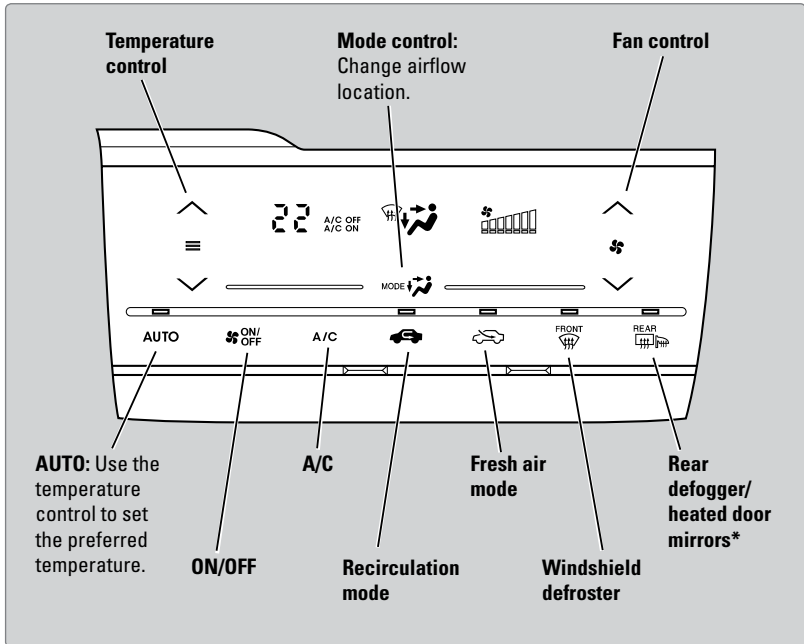

*\*if equipped*