


■ Customizing Door Lock/Unlock Settings

Customize the auto door-lock settings to your preference. Begin with the vehicle in Park (CVT models) or with the parking brake set (manual transmission models).

Customizing lock settings (models with color audio)


Steps	Drive Lock Mode ^{*1}	Off
1	Apply the parking brake. Continuously variable transmission models Move the shift lever to P.	
2	The driver's door must be closed at this stage.	Open the driver's door.
3	Turn the ignition switch to ON ^{*2} . Push the ENGINE START/STOP button twice without depressing the brake pedal ^{*3} .	
4	Continuously variable transmission models Move the shift lever out of P with the brake pedal depressed.	—
5	Press and hold the front of the master door lock switch on the driver's door. You will hear a click more than five seconds elapsed. Release the switch.	
		
6	Continuously variable transmission models Move the shift lever to P.	—
7	Turn the ignition switch to OFF within 20 seconds ^{*2} . Push the ENGINE START/STOP button once without depressing the brake pedal ^{*3} . Customization is completed. All doors unlock and all turn signals blink three times.	

*1: Default setting

*2: Models without smart entry system

*3: Models with smart entry system

Customizing unlock settings (models with color audio)

Steps	Driver Door Open Unlock Mode ^{*1}	Continuously variable transmission models Park Unlock Mode	Off
1	Apply the parking brake. Continuously variable transmission models Move the shift lever to P.		
2	The driver's door must be closed at this stage.		Open the driver's door.
3	Continuously variable transmission models Move the shift lever out of P with the brake pedal depressed.		—
4	Turn the ignition switch to ON ^{*2} . Push the ENGINE START/STOP button twice without depressing the brake pedal ^{*3} .		
5	Press and hold the rear of the master door lock switch on the driver's door. You will hear a click more than five seconds elapsed. Release the switch.		
			
6	Continuously variable transmission models Move the shift lever to P.		—
7	Turn the ignition switch to OFF within 20 seconds ^{*2} . Push the ENGINE START/STOP button once without depressing the brake pedal ^{*3} . Customization is completed. All doors lock and all turn signals blink three times.		

*1: Default setting

*2: Models without smart entry system

*3: Models with smart entry system

Models with Display Audio

■ Walk Away Auto Lock*

When you walk away from the vehicle while carrying the remote transmitter, the doors can automatically lock if the following conditions are met:


- The remote transmitter is within a range of 5 feet (1.5 m).
- All doors and the tailgate are closed.
- There is not an additional remote transmitter inside the vehicle.

Follow these steps (see diagram):

1. Exit the vehicle, close the door and stay near it. Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash. The doors lock.

To turn on this feature, follow the steps below. The vehicle must be in Park (P):

1. From the HOME screen, select Vehicle Settings.
2. Select Door Setup.
3. Select Walk Away Auto Lock.
4. Select On.
5. Select BACK to exit the menus.

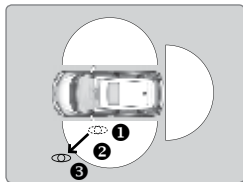

**if equipped*


Door Operation

Use several methods to lock or unlock the doors.

■ Using the Lock Tab

To unlock: Pull the lock tab rearward. When you unlock the door using the lock tab on the driver's door, only the driver's door unlocks.


To lock: Push the lock tab forward. When you lock the door using the lock tab on the driver's door, all other doors and the tailgate lock.

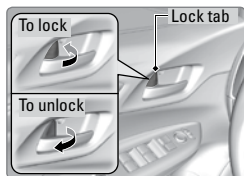

■ Using the Front Door Inner Handle

When you pull either front door inner handle, the door unlocks and opens.


Unlocking and opening the driver's door from the inner handle unlocks all the other doors.

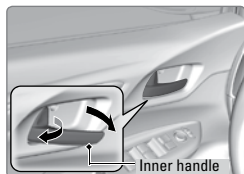

■ Using the Master Door Lock Switch

To unlock: Press the unlock side of the switch to unlock all doors and the tailgate.

To lock: Press the lock side of the switch to lock all doors and the tailgate.

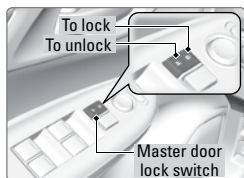


You can use the master door lock switch to customize the door lock and unlock settings. See the Owner's Manual at owners.honda.com for instructions.

■ Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside, regardless of the position of the lock tab.

Slide the lever in the rear door to the lock position and close the door.

Open the door using the outer door handle.

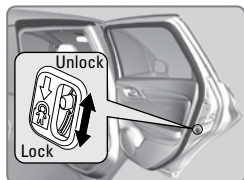


Tailgate Operation

Use these methods to operate the tailgate.

■ Opening the Tailgate


Models without smart entry system

Pull up the tailgate outer handle and lift up the tailgate to open it.

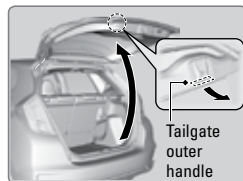

Models with smart entry system

Press the tailgate release button and lift up the tailgate to open it.

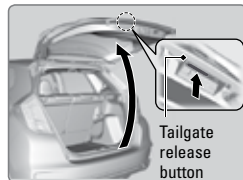

■ Closing the Tailgate

Grab the inner handle and pull the tailgate down. Push it closed from the outside.

