


Maintenance Minder™

When maintenance is due, the Maintenance Minder indicator comes on and a message appears on the display every time you turn the vehicle on. Press the Select/reset knob (models with information display) or the ▲i/▼ steering-wheel buttons (models with multi-information display) to change displays.

See the service code tables on the following pages to check which items need maintenance based on the items shown in the display.

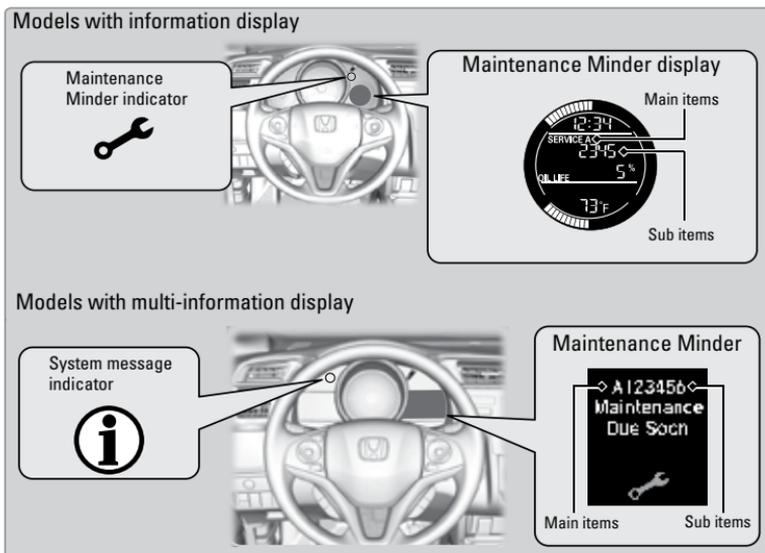

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

U.S. models

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the multi-information display.

Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

| CODE | Maintenance Main Items |
|------|---|
| A | Replace engine oil *1 |
| B | Replace engine oil *1 and oil filter Inspect front and rear brakes/service as necessary Check parking brake adjustment Inspect tie rod ends, steering gearbox, and boots Inspect suspension components Inspect driveshaft boots Inspect brake hoses and lines (Including ABS/VSA) Inspect all fluid levels and condition of fluids Inspect exhaust system # Inspect fuel lines and connections # |

*1: If a message **SERVICE** (models without multi-information display) or **MAINTENANCE** (models with multi-information display) does not appear more than 12 months after the display is reset, change the engine oil every year.

#: See information on maintenance and emissions warranty.

| CODE | Maintenance Sub Items |
|------|---|
| 1 | Rotate tires |
| 2 | Replace air cleaner element *2 Replace dust and pollen filter *3 Inspect drive belt |
| 3 | Replace transmission fluid |
| 4 | Replace spark plugs Inspect valve clearance |
| 5 | Replace engine coolant |

*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

*3: If you drive primarily in urban areas with high concentrations of soot in the air from industry and diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).